
■ILLUMINATED ENTRY SYSTEM


1. General

- The illuminated entry system of the '04 Prius controls 3 kinds of light: front interior light, rear interior light and key slot illumination.
- This system is controlled by the body ECU.

➤ System Diagram ◀

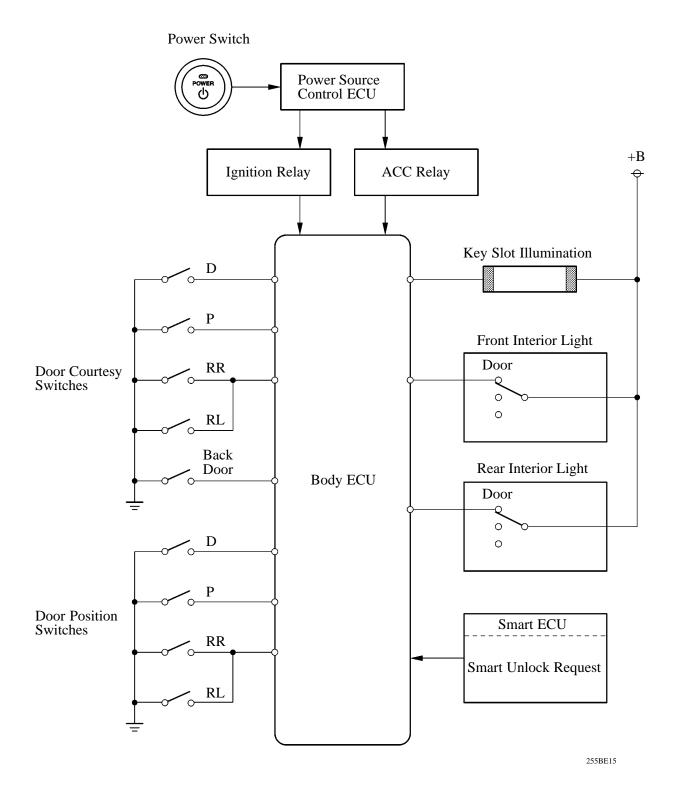


2. Layout of Main Components

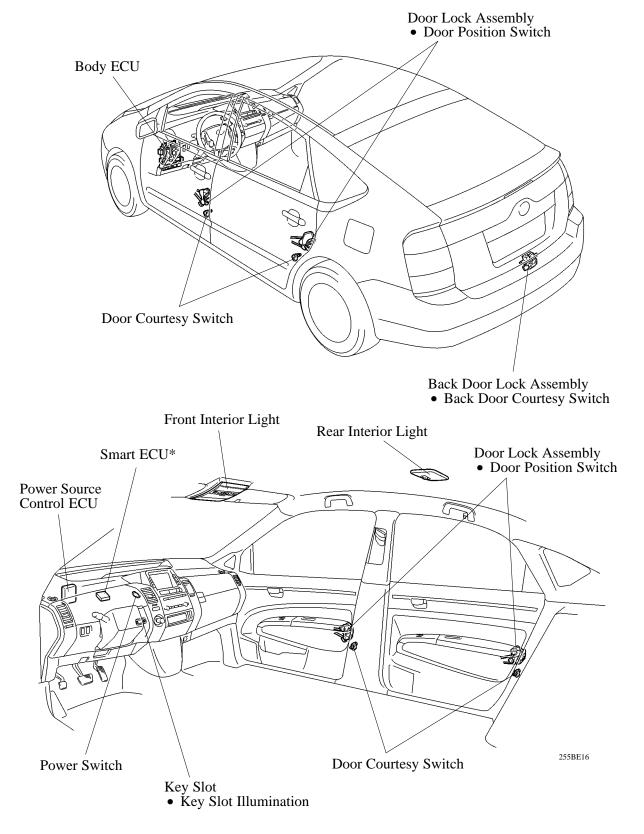

*: Optional Equipment

3. Interior Light and Key Slot Light Control

- The interior light and key slot light control consists primarily of the fade-in/fade-out function and timer illumination function.
- The fade-in function gradually fades the lighting in approximately 1.5 seconds when the illumination is turned ON.
- The fade-out function gradually fades the lighting out in approximately 0.9 seconds when the illumination is turned OFF.
- The interior light and key slot light control activates as described in the diagram below when the items are in the respective state.

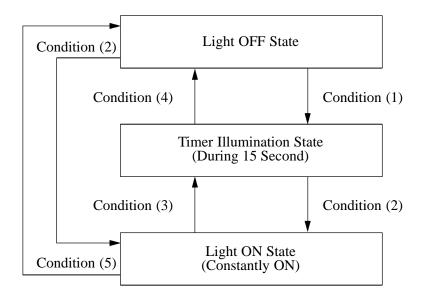

241BE32

Condition	Item
Condition (1)	 With the power switch OFF, all doors closed, and all doors locked, any door unlocks. With all doors closed, the power switch is turned from READY, IG-ON, or ACC to the OFF position. With the power switch OFF and all doors closed, smart unlock*1 is performed.
Condition (2)	Any door is open.
Condition (3)	When the power switch is OFF and any door is unlocked, all doors are closed.
Condition (4)	 Power switch is at READY, ACC or IG-ON position. More than 15 seconds have elapsed since the Timer Illumination State (15 second duration)*². With power switch OFF and all doors closed, all doors are locked.
Condition (5)	 With power switch at READY, ACC or IG-ON, all doors are closed. All doors are closed, and all doors are locked.

^{*1:} Models with Smart Entry & Start System

^{*2:} The setting of function can be changed using the customized body electronics system. For details, refer to Customized Body Electronics System section on page BE-64.