

**PROBLEM SYMPTOMS TABLE**

Problem Symptom	Suspected Area	See Page
Hybrid control system does not start	1. ECU power source circuit 2. Push button start system	<a href="#">05–2417</a> <a href="#">05–2420</a>