


# WATER W/MOTOR & BRACKET PUMP ASSY

21046-01


## REPLACEMENT

1. REMOVE RADIATOR SUPPORT OPENING COVER
2. REMOVE ENGINE UNDER COVER LH
3. REMOVE ENGINE UNDER COVER RH
4. DRAIN HV COOLANT (See page 22-4 )

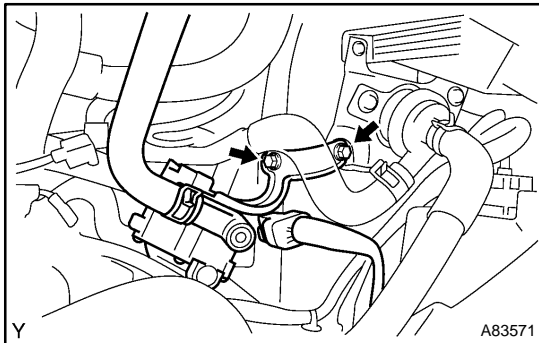


### 5. REMOVE WATER W/BRACKET VALVE ASSY

- (a) Remove the bolt and nut, then disconnect the water valve.

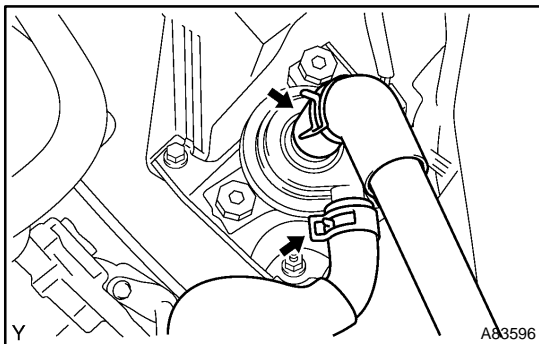

### 6. REMOVE WATER W/MOTOR & BRACKET PUMP ASSY

- (a) Disconnect the 2 inverter cooling hoses shown in the illustration.

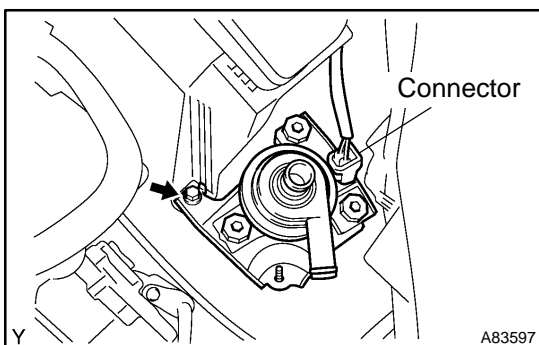

- (b) Remove the bolt, then disconnect the water with motor and bracket pump from the vehicle.
- (c) Disconnect the connector and remove the water pump with motor and bracket pump.

### 7. INSTALL WATER W/MOTOR & BRACKET PUMP ASSY

- (a) Connect the connector.
- (b) Install the water with motor and bracket pump with the bolt.  
**Torque: 7.0 N·m (71 kgf·cm, 62 in.-lbf)**
- (c) Connect the 2 inverter cooling hoses.

### 8. INSTALL WATER W/BRACKET VALVE ASSY

- (a) Install the water valve with the bolt and nut.  
**Torque: 7.0 N·m (71 kgf·cm, 62 in.-lbf)**

### 9. ADD HV COOLANT (See page 22-4 )

10. CHECK FOR ENGINE COOLANT LEAKS (See page 16-2) 
11. INSTALL ENGINE UNDER COVER RH
12. INSTALL ENGINE UNDER COVER LH
13. INSTALL RADIATOR SUPPORT OPENING COVER