

# ANTENNA (CORD/POLE SEPARATE TYPE) HOLDER ASSY REPLACEMENT

6716N-01


HINT:

- COMPONENTS: See page 67-2
- Installation is in the reverse order of removal.

## 1. REMOVE ROOF HEADLINING ASSY (SEE PAGE 76-28)

HINT:



Refer to the procedures up to "REMOVE ROOF HEAD LINING ASSY".

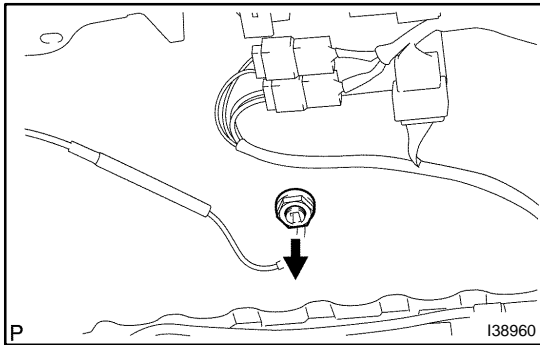

## 2. REMOVE ANTENNA (CORD/POLE SEPARATE TYPE) HOLDER ASSY

- Disconnect each connector.
- Remove the antenna nut.

- Remove the clamp and disengage the 2 claws to remove the antenna holder assy.

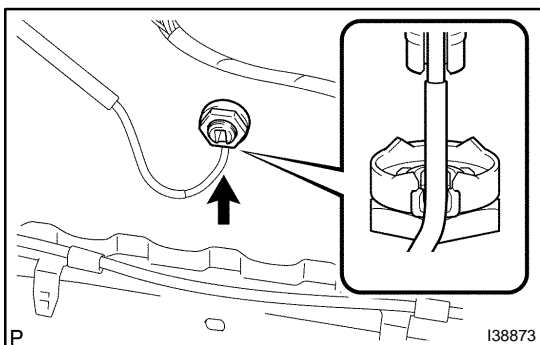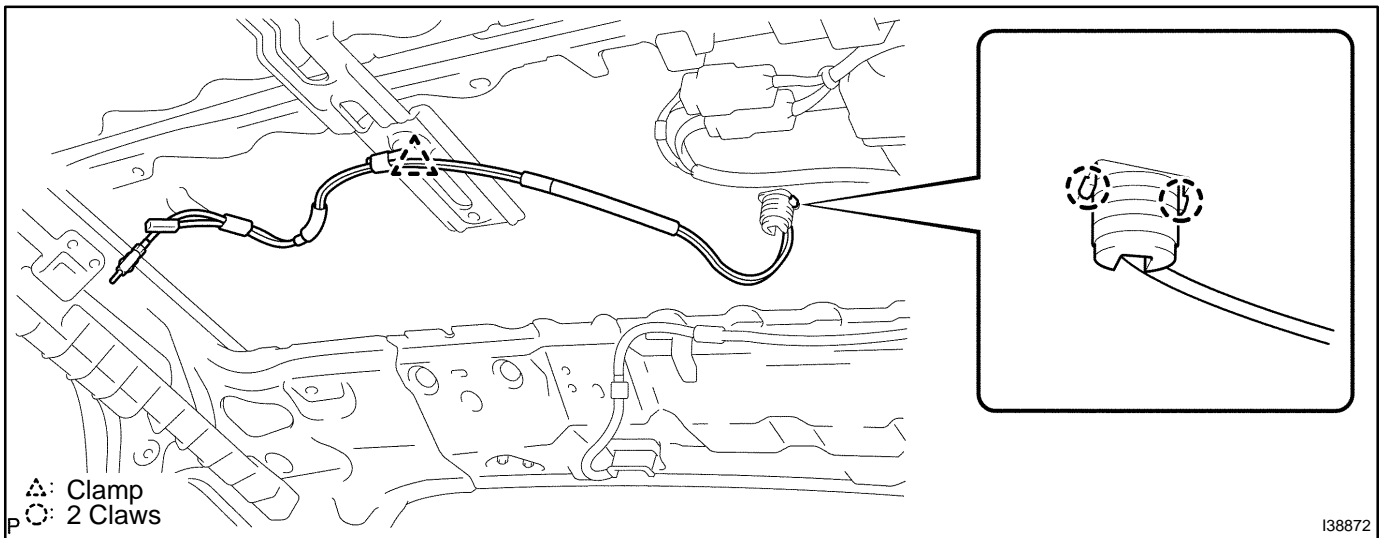

## 3. INSTALL ANTENNA (CORD/POLE SEPARATE TYPE) HOLDER ASSY

- Install the antenna holder assy on the roof and align the antenna cord with the antenna nut cutout.
- Tighten the antenna holder assy with the antenna nut.  
**Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)**
- Install each clamp.

**4. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76-28)**

HINT:

Refer to the procedures from "INSTALL ROOF HEAD LINING ASSY".