


# Key Reminder

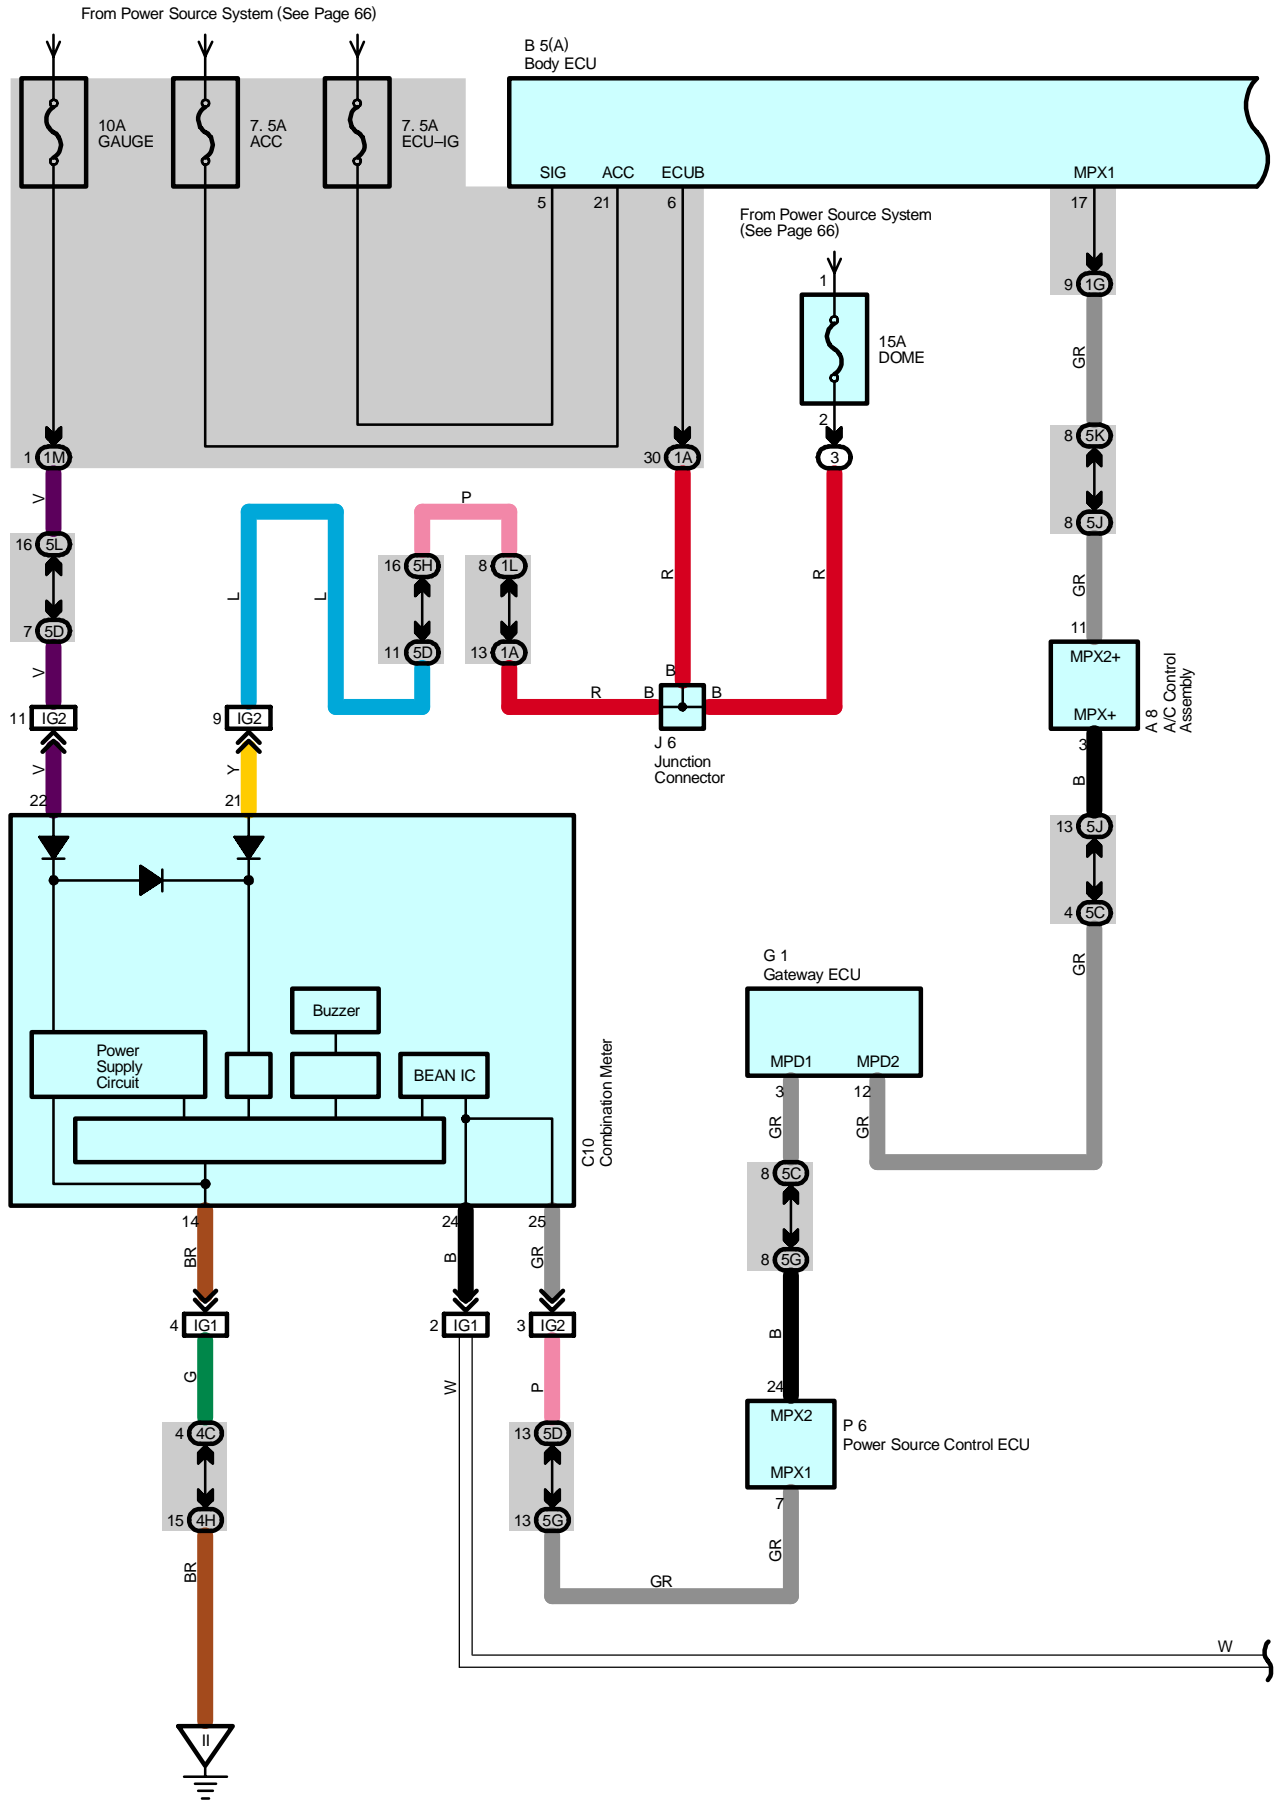



# Key Reminder

## System Outline

### Key Reminder System

If the driver's side door is opened with the power supply set at ACC or OFF position and with the electrical key remained in the key slot, signal from key slot is input to TERMINAL KSW of body ECU and that from courtesy SW at driver's side is input to TERMINAL DCTY of body ECU. The signal from body ECU to combination meter activates warning buzzer to send a message to the driver that electrical key remains in the key slot.

## Service Hints

### Body ECU

- 21-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position
- 5-Ground : Approx. 12 volts with the power SW at IG ON position
- 6-Ground : Always approx. 12 volts
- 1-Ground : Always continuity
- 26-Ground : Continuity with the driver's door open

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	46	G1	47	P6	49
B5	A 46	J6	48	S11	49
C10	47	J25	48	T4	49
D7	50	K2	48	T5	49

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1L		
1M		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4H		
4I		
4J		
4L	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5G		
5H		
5J		
5K		
5L		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)



**: Ground Points**

Code	See Page	Ground Points Location
IH	<a href="#">56</a>	Cowl Side Panel LH
II	<a href="#">56</a>	Instrument Panel Brace LH