


■ DIAGNOSIS

- If the transmission control ECU detects a malfunction in the shift control system, the ECU performs a diagnosis and memorizes the failed section. Furthermore, it causes the parking switch indicator to blink, the master warning light to illuminate, and display a warning message on the multi display to inform the driver.

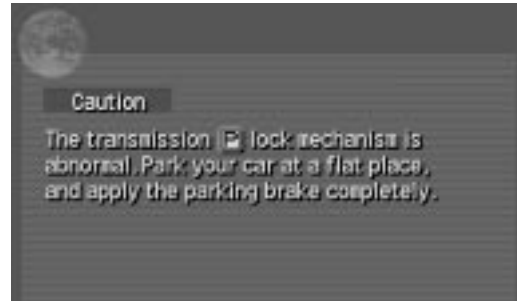

255CH20

- The transmission control ECU will also store the DTCs (Diagnostic Trouble Codes) of the malfunctions.
- The DTCs can be accessed the use of the hand-held tester with CAN extension module.
- Some DTCs have been newly added to this system. For details, refer to the 2004 Prius Repair Manual (Pub. No. RM1075U).

■ FAIL-SAFE

If the transmission control ECU detects a malfunction in the system, the transmission control ECU controls the system according to the data already stored in memory.

For details, refer to the 2004 Prius Repair Manual (Pub. No. RM1075U).