


TERMINALS OF ECU

1. AIRBAG ECU ASSY

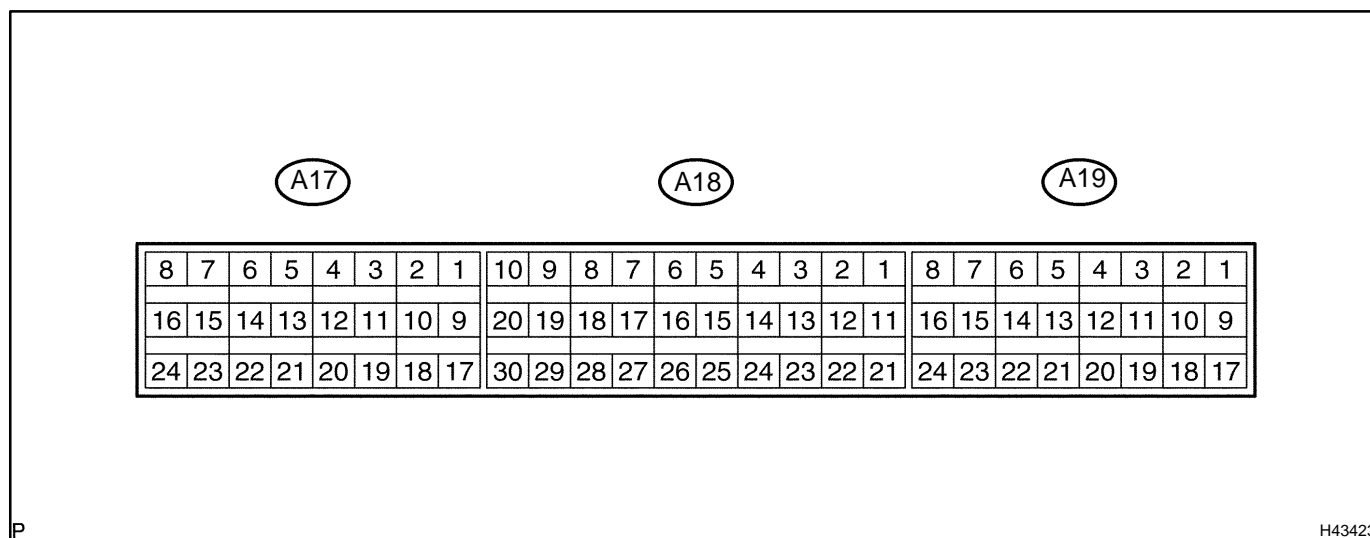

Terminal No.	Terminal Symbol	Destination
A17-1	SFD+	Front seat airbag assy LH (Side squib (D seat side))
A17-2	SFD-	Front seat airbag assy LH (Side squib (D seat side))
A17-3	ICD-	Curtain shield airbag assy LH (Curtain shield airbag (D seat side) squib)
A17-4	ICD+	Curtain shield airbag assy LH (Curtain shield airbag (D seat side) squib)
A17-5	PD+	Front seat outer belt assy LH (P/T squib (D seat side))
A17-6	PD-	Front seat outer belt assy LH (P/T squib (D seat side))
A17-9	DSP+	Front seat inner belt assy LH
A17-10	DSE+	Seat position airbag sensor
A17-17	DSP-	Front seat inner belt assy LH
A17-18	DSE-	Seat position airbag sensor
A17-19	VUPD	Side airbag sensor assy LH
A17-20	VUCD	Airbag sensor rear LH
A17-21	ESD	Side airbag sensor assy LH
A17-22	ESCD	Airbag sensor rear LH
A18-1	P2+	Front passenger airbag assy (P squib, Dual stage - 2nd step)
A18-2	P2-	Front passenger airbag assy (P squib, Dual stage - 2nd step)
A18-3	P-	Front passenger airbag assy (P squib)
A18-4	P+	Front passenger airbag assy (P squib)
A18-5	D+	Horn button assy (D squib)
A18-6	D-	Horn button assy (D squib)
A18-7	D2-	Horn button assy (D squib, Dual stage - 2nd step)
A18-8	D2+	Horn button assy (D squib, Dual stage - 2nd step)
A18-14	LA	Combination meter assy (SRS warning light)
A18-15	TC	DLC3
A18-16	SIL	DLC3
A18-21	IG2	IGN Fuse
A18-22	GSW2	HV ECU
A18-25	E1	Ground
A18-26	E2	Ground
A18-27	-SR	Airbag sensor front RH
A18-28	-SL	Airbag sensor front LH

Terminal No.	Terminal Symbol	Destination
A18-29	+SR	Airbag sensor front RH
A18-30	+SL	Airbag sensor front LH
A19-3	PP-	Front seat outer belt assy RH (P/T squib (P seat side))
A19-4	PP+	Front seat outer belt assy RH (P/T squib (P seat side))
A19-5	ICP+	Curtain shield airbag assy RH (Curtain shield airbag (D seat side) squib)
A19-6	ICP-	Curtain shield airbag assy RH (Curtain shield airbag (D seat side) squib)
A19-7	SFP-	Front seat airbag assy RH (Side Squib (D seat side))
A19-8	SFP+	Front seat airbag assy RH (Side Squib (D seat side))
A19-15	PBE+	Front seat inner belt assy RH
A19-19	ESCP	Airbag sensor rear RH
A19-20	ESP	Side airbag sensor assy RH
A19-21	VUCP	Airbag sensor rear RH
A19-22	VUPP	Side airbag sensor assy RH