

## FAIL-SAFE CHART

If any of the following codes are recorded, the ECM enters fail-safe mode.

DTC No.	Fail-Safe Operation	Fail-Safe Deactivation Conditions
P0031 P0032 P0037 P0038	Heater is turned OFF	Power switch OFF
P0100 P0102 P0103	Ignition timing is calculated from engine speed and throttle angle	"Pass" condition detected
P0110 P0112 P0113	Intake air temperature is fixed at 20°C (68°F)	"Pass" condition detected
P0115 P0117 P0118	Engine coolant temperature is fixed at 80°C (176°F)	"Pass" condition detected
P0120 P0122 P0123	Fuel cut intermittently	Power switch OFF
P0121	Fuel cut intermittently	"Pass" condition detected and power switch OFF
P0325	Maximum ignition timing retardation	Power switch OFF
P0351 P0352 P0353 P0354	Fuel cut	"Pass" condition detected
P657	VTA is fixed at about 16 % and fuel cut intermittently	"Pass" condition detected and power switch OFF
P1115 P1117 P1118	Engine coolant temperature is fixed at 80°C (176°F)	"Pass" condition detected
P1120 P1122 P1123	Water valve position is fixed at position when DTC is detected	"Pass" condition detected
P2102 P2103	VTA is fixed at about 16 % and fuel cut intermittently	Power switch OFF
P2119	VTA is fixed at about 16 % and fuel cut intermittently	"Pass" condition detected and power switch OFF