

PROBLEM SYMPTOMS TABLE

HINT:

- Inspect the related "Fuse" and "Relay" before confirming the suspected area as shown in the charts below.
- The upper panel (instrument panel) must be removed to inspect the meter connector. The Prius has a sub wire harness connector installed in a different position from the meter connector to shorten labor time. Work on the combination meter can also be done through this sub wire harness connector (see page 05–1989).

MALFUNCTION SYSTEM:

Symptom	Suspected Area	See page
Entire combination meter does not operate.	1. Refer to troubleshooting	05–1998
Malfunction in ODO/TRIP	1. Refer to troubleshooting	05–2009
Operating light control rheostat does not change light brightness.	1. Refer to troubleshooting	05–2005

METER GAUGES:

Symptom	Suspected Area	See page
Malfunction in speedometer	1. Refer to troubleshooting	05–2000
Malfunction in fuel receiver gauge	1. Refer to troubleshooting	05–2003

WARNING LIGHTS:

Symptom	Suspected Area	See page
Check Engine warning light does not come on.	1. ECM	05–13
	2. Wire Harness or Connector	–
	3. Combination Meter Assy	71–19
Brake Control warning light does not come on.	1. Refer to troubleshooting	05–952
	2. Wire Harness or Connector	–
	3. Combination Meter Assy	71–19
ABS warning light does not come on.	1. Refer to troubleshooting	05–952
	2. Wire Harness or Connector	–
	3. Combination Meter Assy	71–19
SRS warning light does not come on.	1. Airbag Sensor Assy Center	05–1391
	2. Wire Harness or Connector	–
	3. Combination Meter Assy	71–19
Open door warning light does not come on.	1. Refer to troubleshooting	05–2074
	2. Wire Harness or Connector	–
	3. Combination Meter Assy	71–19
VSC warning light does not come on.	1. Refer to troubleshooting	05–952
	2. Wire Harness or Connector	–
	3. Combination Meter Assy	71–19
Seat belt warning lamp for driver's seat does not operate	1. Refer to troubleshooting	05–2011
Seat belt warning lamp for passenger's seat does not operate	1. Refer to troubleshooting	05–2013

INDICATOR LIGHTS:

Symptom	Suspected Area	See page
Turn indicator light does not come on.	1. Turn Signal and Hazard Warning System	05–1669
	2. Wire Harness or Connector	–
	3. Combination Meter Assy	71–19
High beam indicator light does not come on.	1. Headlight Dimmer Switch	05–1746
	2. Wire Harness or Connector	–
	3. Combination Meter Assy	71–19
A/C AUTO indicator light does not come on.	1. Refer to troubleshooting	05–1263
	2. Wire Harness or Connector	–
	3. Combination Meter Assy	71–19
Rr DEF indicator light does not come on.	1. Refer to troubleshooting	05–1263
	2. Wire Harness or Connector	–
	3. Combination Meter Assy	71–19

DIAGNOSTICS – COMBINATION METER

Fr DEF indicator light does not come on.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-1263 – 71-19
RECIRCULATE indicator light does not come on.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-1263 – 71-19
LOW AMBIENT TEMP. indicator light does not come on.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-1263 – 71-19
HEAD indicator light does not come on.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-1746 – 71-19
SMART indicator light does not come on.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-2228 – 71-19
SECURITY indicator light does not come on.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-2499 – 71-19
SLIP indicator light does not come on.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-952 – 71-19
CRUISE indicator light does not come on.	1. ECM 2. Wire Harness or Connector 3. Combination Meter Assy	05-13 – 71-19
All buzzers (key reminder, tail cancel, seat belt) do not operate.	1. Refer to troubleshooting 2. Combination Meter Assy	05-1985 71-19

DISPLAY WARNING:

Symptom	Suspected Area	See page
Malfunction in HV system, Low battery (Main), Charge, and Shift reject.	1. Hybrid Vehicle Control ECU 2. Combination Meter Assy	05-404 71-19
Malfunction in Hi water temperature.	1. ECM 2. Combination Meter Assy	05-13 71-19
Malfunction in Transmission control system.	1. Transmission Control ECU 2. Combination Meter Assy	05-404 71-19
Malfunction in Engine oil pressure.	1. Engine Oil Pressure Switch 2. Combination Meter Assy	05-13 71-19
Malfunction in EPS system.	1. Power Steering ECU 2. Combination Meter Assy	05-1208 71-19
Malfunction in Headlight leveling control.	1. Headlight control ECU 2. Combination Meter Assy	05-1746 71-19

BUZZER:

Symptom	Suspect Area	See page
Key reminder warning buzzer does not sound.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-2311 – 71-19
Light reminder warning buzzer does not sound.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-1746 – 71-19
Seat belt warning buzzer does not sound.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	61-5 – 71-19
Headlight automatic leveling warning buzzer does not sound.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-1746 – 71-19

Warning buzzer does not sound (READY, A/T R, N/D warning, HV system, Main battery, Charge, Shift reject) .	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-404 – 71-19
Warning buzzer does not sound (Hi water temperature, Oil pressure).	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-13 – 71-19
Warning buzzer does not sound (Smart key system) .	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-2228 – 71-19
Steering lock warning buzzer does not sound.	1. Refer to troubleshooting 2. Wire Harness or Connector 3. Combination Meter Assy	05-1208 – 71-19

HINT:

Refer to On-vehicle inspection in combination meter (see page [05-2016](#)).