

DIAGNOSTIC TROUBLE CODE CHART

1. DTC CHECK

If a malfunction code is displayed during the DTC check, check the suspected area listed for that code in the table below, and proceed to the appropriate page.

DTC No. (See Page)	Symptom	Suspect Area
B1244 (05-1691)	Light sensor circuit malfunction	<ul style="list-style-type: none">• Automatic light control sensor• Harness or connector• Multiplex network body ECU