


CHARCOAL CANISTER ASSY (1NZ-FXE)

120DV-01


REPLACEMENT

1. DISCHARGE FUEL SYSTEM PRESSURE (See page 11-3)
2. REMOVE REAR FLOOR BOARD NO.2 (See page 19-2)
3. REMOVE DECK FLOOR BOX REAR (See page 19-2)
4. REMOVE REAR FLOOR BOARD NO.3 (See page 19-2)
5. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19-2)
6. REMOVE REAR SEAT CUSHION ASSY (See page 72-9)
7. REMOVE REAR FLOOR SERVICE HOLE COVER (See page 11-24)
8. REMOVE FLOOR PANEL BRACE FRONT (See page 15-2)
9. REMOVE EXHAUST PIPE ASSY FRONT (See page 11-24)
10. REMOVE FUEL TANK ASSY (See page 11-24)

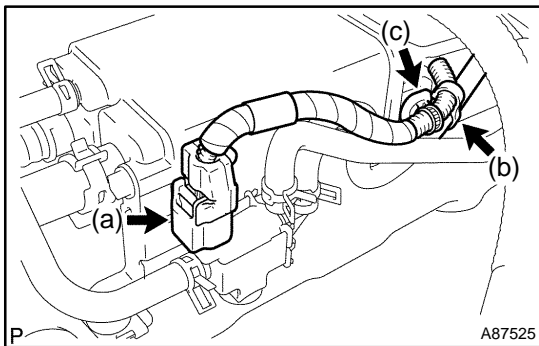


11. REMOVE CHARCOAL CANISTER ASSY

- (a) Disconnect the VSV connector.
- (b) Remove the clamp
- (c) Remove the wire harness clamp.

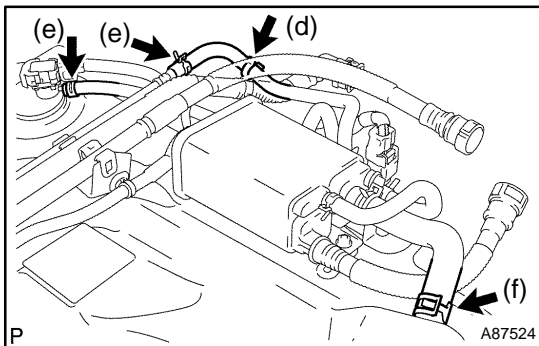

- (d) Remove the clamp.
- (e) Disconnect the 2 charcoal canister hoses from the fuel tank retainer and fuel tank to canister tube.
- (f) Disconnect the charcoal canister outlet hose No. 1 from the fuel tank.

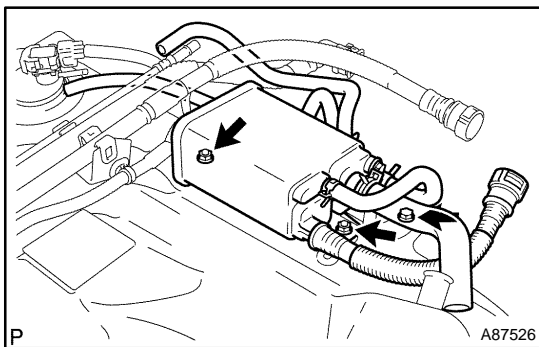

- (g) Remove the bolt and 2 nuts, then remove the charcoal canister.

12. INSTALL CHARCOAL CANISTER ASSY

Torque: 6.0 N·m (61 kgf·cm, 53 in.-lbf)

13. INSTALL FUEL TANK ASSY (See page 11-24)
14. INSTALL EXHAUST PIPE ASSY FRONT (See page 11-24)
15. CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19-2)

2004 Prius - Preliminary Release (RM1075U)

16. CHECK FOR FUEL LEAKS (See page 11-7)
17. CHECK FOR EXHAUST GAS LEAKS
18. INSTALL FLOOR PANEL BRACE FRONT (See page 15-2)
19. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER
20. INSTALL REAR FLOOR SERVICE HOLE COVER (See page 11-24)
21. INSTALL REAR SEAT CUSHION ASSY (See page 72-9)
22. INSTALL REAR FLOOR BOARD NO.3
23. INSTALL DECK FLOOR BOX REAR
24. INSTALL REAR FLOOR BOARD NO.2
25. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01-28)