


# INSPECTION

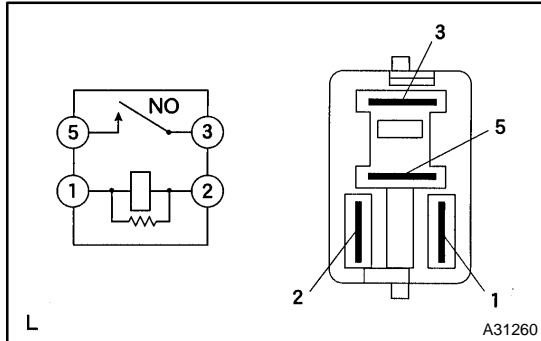


## 1. INSPECT COOLING FAN RELAY

- (a) Inspect the resistance.
  - (1) Using an ohmmeter, measure the resistance between the terminals.

**Standard:**

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Apply battery voltage to terminals 1 and 2)

If the resistance is not as specified, replace the cooling fan relay.

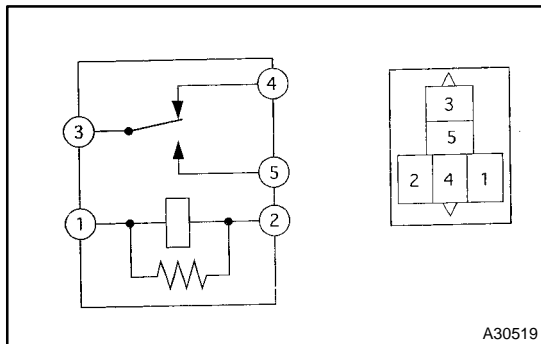

## 2. INSPECT COOLING FAN RELAY NO.2

- (a) Inspect the resistance.
  - (1) Using an ohmmeter, measure the resistance between the terminals.

**Standard:**

Tester Connection	Specified Condition
3 - 4	Below 1 Ω
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Apply battery voltage to terminals 1 and 2)

If the resistance is not as specified, replace the cooling fan relay No. 2.


**3. INSPECT INTEGRATION RELAY**

- (a) Inspect the resistance of the fan relay.
  - (1) Using an ohmmeter, measure the resistance between the terminals.

**Standard:**

Tester Connection	Specified Condition
B1 - B4	10 kΩ or higher
B1 - B4	Below 1 Ω (Apply battery voltage to terminals B2 and B3)

If the resistance is not as specified, replace the integration relay.

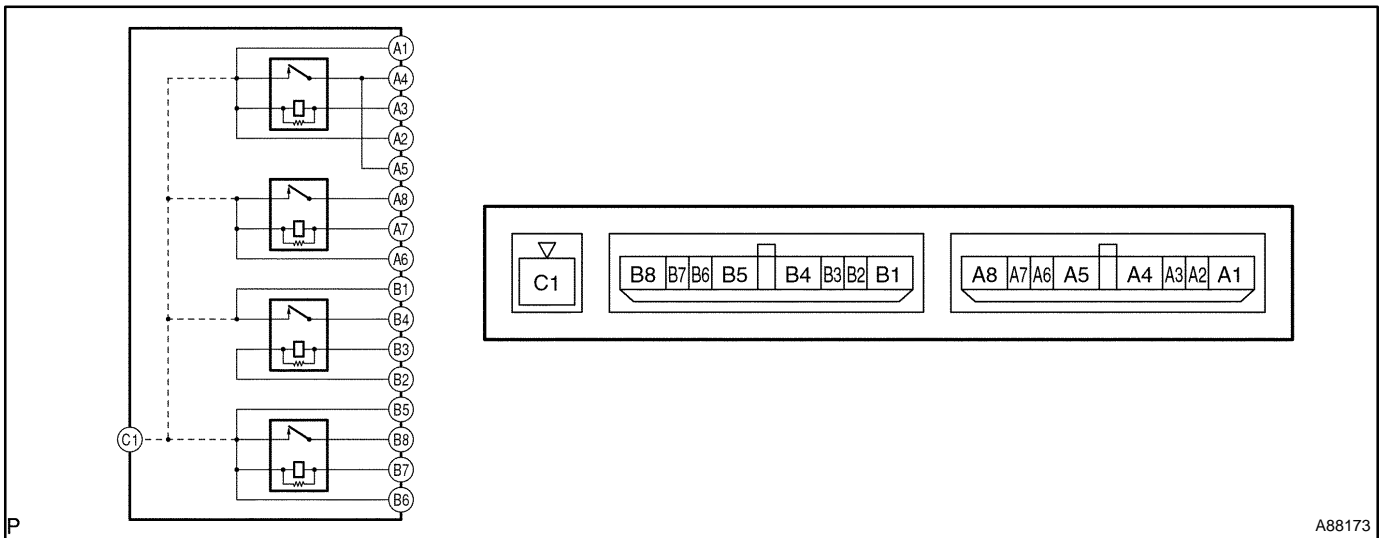

A88173