

BATTERY ECU ASSY REPLACEMENT

2103Y-01

NOTICE:

- When working on the high voltage systems, always wear insulating gloves.
 - After removing the service plug grip, do not operate the power switch as it may damage the hybrid vehicle control ECU.
 - Keep the removed service plug in your pocket to prevent other technicians from reconnecting it while you are servicing the vehicle.
 - After removing the service plug grip, do not touch the high voltage connectors and terminals for 5 minutes.
1. PRECAUTION (See page 21-7)
 2. REMOVE REAR FLOOR BOARD NO.2 (See page 21-116)
 3. REMOVE DECK FLOOR BOX REAR (See page 21-116)
 4. REMOVE REAR FLOOR BOARD NO.3 (See page 21-116)
 5. DISCONNECT BATTERY NEGATIVE TERMINAL (See page 21-116)
 6. REMOVE SERVICE PLUG GRIP (See page 21-116)
 7. REMOVE DECK TRIM COVER REAR (See page 21-54)
 8. REMOVE TONNEAU COVER ASSY (See page 21-54)
 9. REMOVE REAR SEAT CUSHION ASSY (See page 21-54)
 10. REMOVE REAR FLOOR BOARD NO.1 (See page 21-54)
 11. REMOVE REAR SIDE SEAT BACK FRAME LH (See page 21-54)
 12. REMOVE REAR FLOOR BOARD NO.4 (See page 21-54)
 13. REMOVE DECK FLOOR BOX LH (See page 21-54)
 14. REMOVE DECK TRIM SIDE PANEL ASSY LH (See page 21-54)
 15. REMOVE BATTERY CARRIER BRACKET (See page 21-54)
 16. REMOVE BATTERY CARRIER PANEL NO.6 (See page 21-54)


NOTICE:

Wear insulating gloves.

17. REMOVE JUNCTION TERMINAL (See page 21-54)

NOTICE:

Wear insulating gloves.

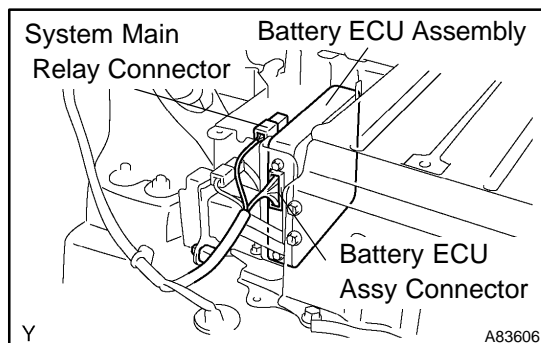

18. REMOVE BATTERY ECU ASSY

NOTICE:

Wear insulating gloves.

- (a) Disconnect the system main relay connector.

NOTICE:

Insulate the disconnected connectors with insulating tape.

- (b) Disconnect the battery ECU assembly connector.

NOTICE:

Insulate the disconnected connectors with insulating tape.

- (c) Disconnect the thermistor connector.

NOTICE:


Insulate the disconnected connectors with insulating tape.

- (d) Remove the clamp, then disconnect the frame wire No. 2 connector.

NOTICE:

Insulate the disconnected connectors with insulating tape.

- (e) Remove the nut, then disconnect the aluminum shield wire of the main battery cable.
 (f) Remove the 2 screws and battery ECU assembly.

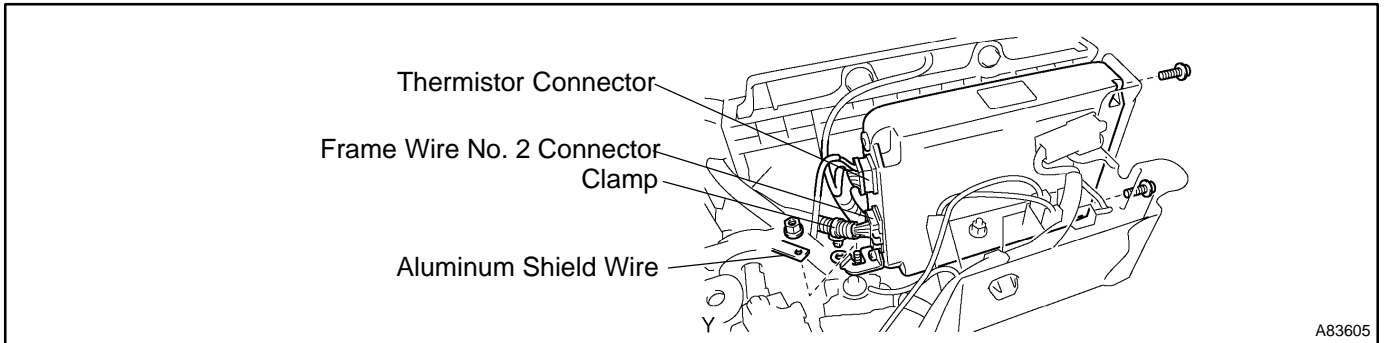


A83605


19. INSTALL BATTERY ECU ASSY**NOTICE:**

Wear insulating gloves.

- (a) Install the battery ECU assembly with the 2 screws.
Torque: 3.3 N·m (34 kgf·cm, 29 in.·lbf)
- (b) Tighten the aluminum shield wire of the main battery cable together with the battery ECU assembly with a new nut.
Torque: 3.3 N·m (34 kgf·cm, 29 in.·lbf)
- (c) Connect the clamp and frame wire No. 2 connector.
 (d) Connect the thermistor connector.

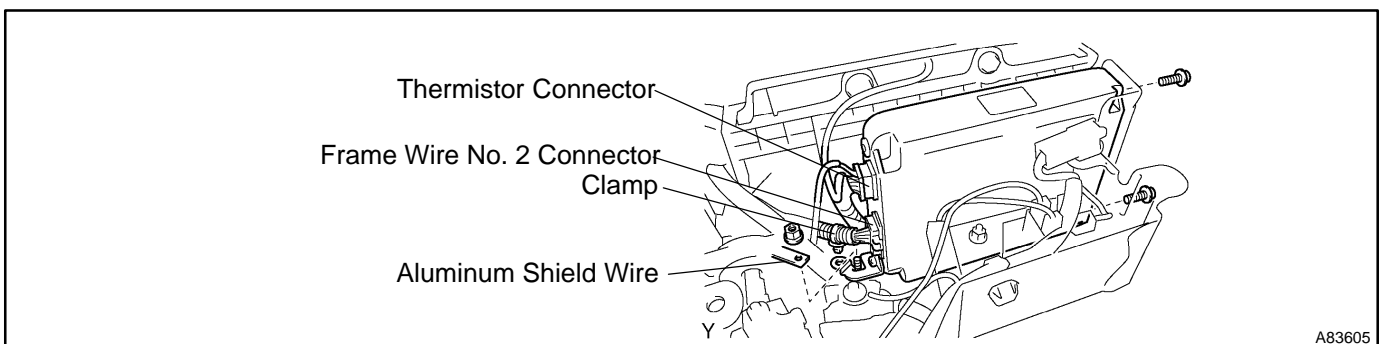

A83605

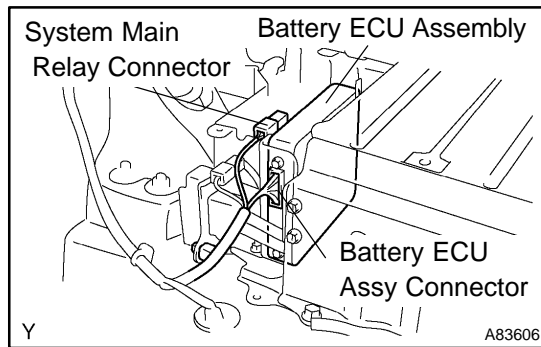

- (e) Connect the system main relay connector.
- (f) Remove the 2 screws and battery ECU assembly.

20. INSTALL JUNCTION TERMINAL (See page 21-54)

NOTICE:

Wear insulating gloves.

21. INSTALL BATTERY CARRIER PANEL NO.6 (See page 21-54)

NOTICE:

Wear insulating gloves.

22. INSTALL BATTERY CARRIER BRACKET (See page 21-54)

23. INSTALL DECK TRIM SIDE PANEL ASSY LH

24. INSTALL DECK FLOOR BOX LH

25. INSTALL REAR FLOOR BOARD NO.4

26. INSTALL REAR SIDE SEAT BACK FRAME LH

27. INSTALL REAR FLOOR BOARD NO.1

28. INSTALL REAR SEAT CUSHION ASSY

29. INSTALL TONNEAU COVER ASSY

30. INSTALL DECK TRIM COVER REAR

31. INSTALL SERVICE PLUG GRIP (See page 21-116)

NOTICE:

Wear insulating gloves.

32. CONNECT BATTERY NEGATIVE TERMINAL

Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)

33. INSTALL REAR FLOOR BOARD NO.3

34. INSTALL DECK FLOOR BOX REAR

35. INSTALL REAR FLOOR BOARD NO.2

36. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01-28)