



REPLACEMENT


1. REMOVE REAR FLOOR BOARD NO.2 (See page 21-116)
2. REMOVE DECK FLOOR BOX REAR (See page 21-116)
3. REMOVE REAR FLOOR BOARD NO.3 (See page 21-116)
4. DISCONNECT BATTERY NEGATIVE TERMINAL (See page 21-116)
5. REMOVE DECK TRIM COVER REAR (See page 21-54)
6. REMOVE TONNEAU COVER ASSY (See page 21-54)
7. REMOVE REAR SEAT CUSHION ASSY (See page 21-54)
8. REMOVE REAR FLOOR BOARD NO.1 (See page 21-54)
9. REMOVE REAR SIDE SEAT BACK FRAME RH (See page 21-54)
10. REMOVE DECK TRIM SIDE PANEL ASSY RH (See page 21-54)
11. REMOVE QUARTER VENT DUCT INNER NO.2 (See page 21-54)

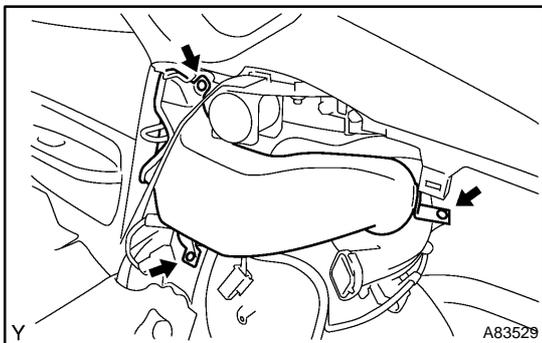

12. REMOVE VENTILATOR DUCT INNER
 - (a) Remove the 3 clips and ventilator duct inner.

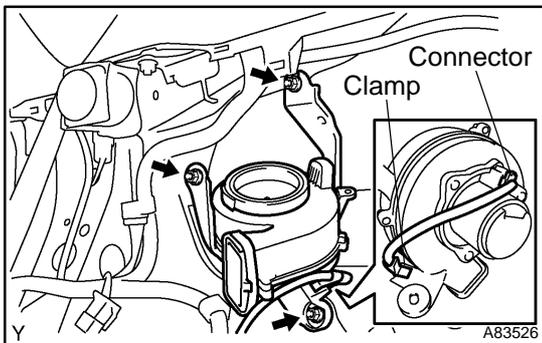

13. REMOVE BATTERY BLOWER ASSY
 - (a) Remove the 3 nuts, then disconnect the battery blower assembly from the vehicle.
 - (b) Remove the connector, clamp and battery blower assembly.

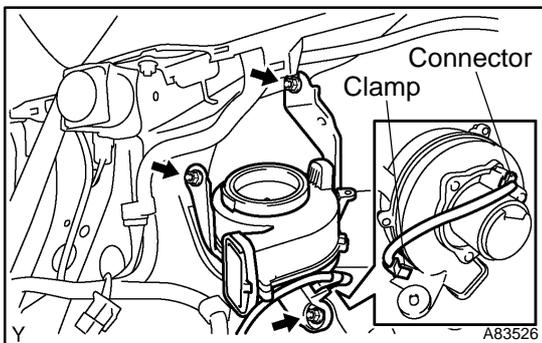

14. INSTALL BATTERY BLOWER ASSY
 - (a) Connect the connector to the battery blower assembly.
 - (b) Install the clamp on the battery blower assembly.
 - (c) Install the battery blower assembly with the 3 nuts.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

15. INSTALL VENTILATOR DUCT INNER
16. INSTALL QUARTER VENT DUCT INNER NO.2
17. INSTALL DECK TRIM SIDE PANEL ASSY RH
18. INSTALL REAR SIDE SEAT BACK FRAME RH

19. INSTALL REAR FLOOR BOARD NO.1
20. INSTALL REAR SEAT CUSHION ASSY
21. INSTALL TONNEAU COVER ASSY
22. INSTALL DECK TRIM COVER REAR
23. CONNECT BATTERY NEGATIVE TERMINAL
Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)
24. INSTALL REAR FLOOR BOARD NO.3
25. INSTALL DECK FLOOR BOX REAR
26. INSTALL REAR FLOOR BOARD NO.2
27. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01-28)