

STABILIZER BAR REAR REPLACEMENT


27018-01

HINT:

COMPONENTS: See page 27-2.


1. REMOVE REAR AXLE BEAM DAMPER

- (a) Remove the rear axle beam damper from the rear axle beam Assy.

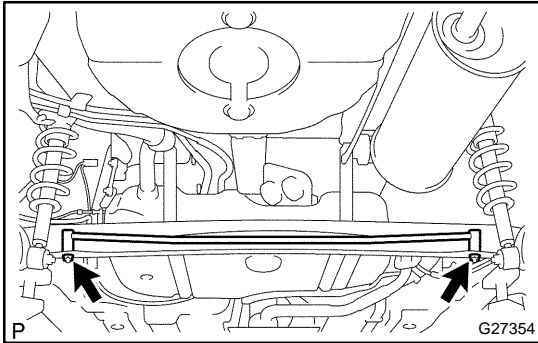

2. REMOVE STABILIZER BAR REAR


- (a) Remove the 2 bolts, the 2 nuts and then the stabilizer bar.

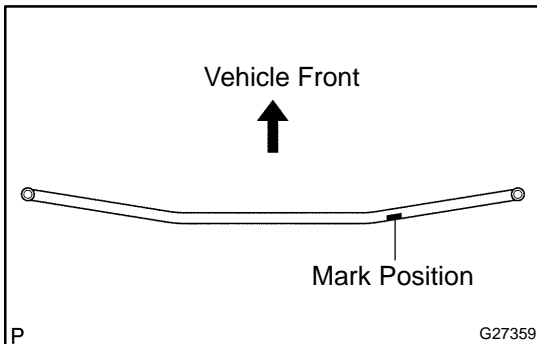

3. INSTALL STABILIZER BAR REAR

- (a) Install the stabilizer bar so that the mark position faces towards the vehicle's right rear. Hold the bolts and tighten the nuts.

Torque: 149 N·m (1,520 kgf·cm, 110 ft·lbf)

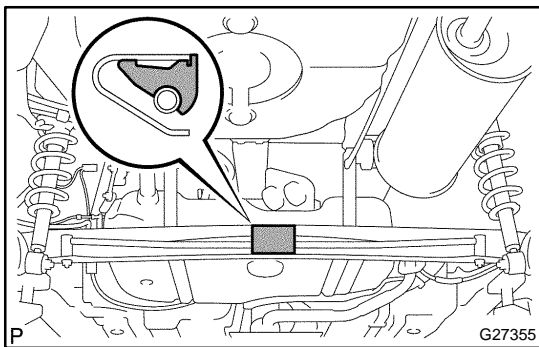

4. INSTALL REAR AXLE BEAM DAMPER

- (a) Install the rear axle beam damper to the center of the rear axle beam Assy.