

# REAR AXLE LH HUB BOLT REPLACEMENT

30002-01

HINT:

Refer to components: See page 30-26


Use the same procedures for the RH side and LH side.

The procedures listed below are for the LH side.

1. REMOVE REAR WHEEL
2. REMOVE REAR BRAKE DRUM SUB-ASSY


HINT:

Put matchmarks on the rear brake drum and rear axle hub.

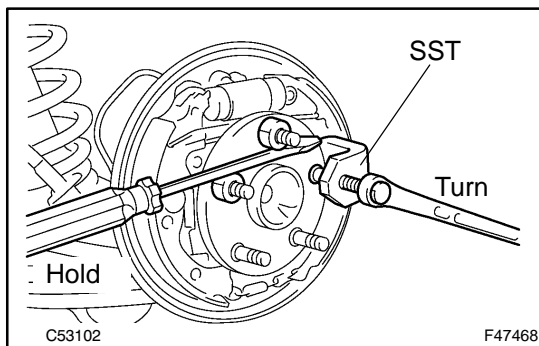

### 3. REMOVE REAR AXLE LH HUB BOLT

- (a) Using SST, remove the rear axle hub bolt LH.  
SST 09628-10011

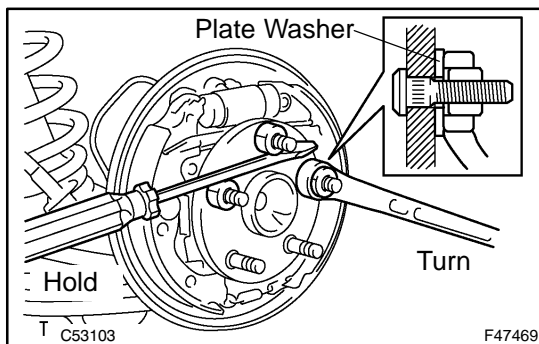

### 4. INSTALL REAR AXLE LH HUB BOLT

- (a) Pass the plate washer as shown in the illustration through the rear axle hub nut LH and install the rear axle hub bolt LH while tightening the nut (M12 × P1.5 mm).

HINT:

A plate washer of 5 mm or more in thickness is preferable.

### 5. INSTALL REAR BRAKE DRUM SUB-ASSY

HINT:

Align the matchmarks of the rear brake drum and rear axle hub before installing them.

### 6. INSTALL REAR WHEEL

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**