

# DRIVE SHAFT, PROPELLER SHAFT, AXLE

300NT-01

## PROBLEM SYMPTOMS TABLE

### HINT:

Use the table below to help determine the cause of the problem. Check each part in order. If necessary, replace these parts.

Symptom	Suspected Area	See page
Wander	1. Tire (improper air pressure, uneven wear)	–
	2. Wheel alignment (Front)	26-6
	3. Wheel alignment (Rear)	27-3
	4. Hub bearing	30-2
	5. Front shock absorber w/ coil spring	26-12
	6. Rear shock absorber w/ coil spring	27-4
Front wheel shimmy	1. Wheel (unbalance)	–
	2. Hub bearing	30-2
	3. Front lower ball joint	26-22
	4. Front shock absorber w/ coil spring	26-12
Noise (Front)	1. Front shock absorber w/ coil spring	26-12
	2. Front drive shaft assy	30-7
	3. Hub bearing	30-21
	4. Front lower ball joint	26-22
Noise (Rear)	1. Hub bearing	30-2
	2. Rear shock absorber w/ coil spring	27-4