


YAWRATE SENSOR REPLACEMENT

3215N-01

1. REMOVE CONSOLE PANEL SUB-ASSY UPPER (SEE PAGE 71-17)
2. REMOVE CONSOLE BOX POCKET (SEE PAGE 71-17)
3. REMOVE CONSOLE BOX CARPET (SEE PAGE 71-17)
4. REMOVE CONSOLE BOX ASSY RR (SEE PAGE 71-17)

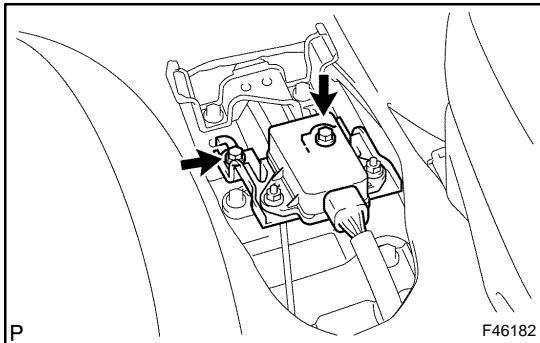

5. REMOVE YAWRATE SENSOR

- (a) Disconnect the connector and remove the 2 bolts and the yawrate sensor assy.

6. INSTALL YAWRATE SENSOR

- (a) Install the yawrate sensor assy with 2 bolts.
Torque: 19 N·m (194 kgf·cm, 14 ft·lbf)
- (b) Connect the connector of yawrate sensor assy.

7. INSTALL CONSOLE BOX ASSY RR

8. INSTALL CONSOLE BOX CARPET

9. INSTALL CONSOLE BOX POCKET

10. INSTALL CONSOLE PANEL SUB-ASSY UPPER

11. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (SEE PAGE 05-960)

12. CHECK AND CLEAR DTC (SEE PAGE 05-975)