


## ADJUSTMENT


1. REMOVE REAR WHEEL
2. ADJUST PARKING BRAKE SHOE CLEARANCE (SEE PAGE 32-42)
3. INSTALL REAR WHEEL  
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
4. CHECK PARKING BRAKE PEDAL TRAVEL
  - (a) Strongly step on the parking brake pedal.
  - (b) Release the parking brake.
  - (c) Slowly depress the parking brake pedal all the way again and count the number of clicks.  
**Parking brake pedal travel: 6 to 9 clicks at 300 N (31 kgf)**

### 5. ADJUST PARKING BRAKE PEDAL TRAVEL

- (a) Remove the console panel sub-assy upper (see page 71-17).
- (b) Remove the console box carpet (see page 71-17).
- (c) Remove the console box assy RR (see page 71-17).
- (d) Remove the front floor footrest (see page 33-6).
- (e) Remove the 8 bolts and the front floor cross member reinforcement sub-assy LH.

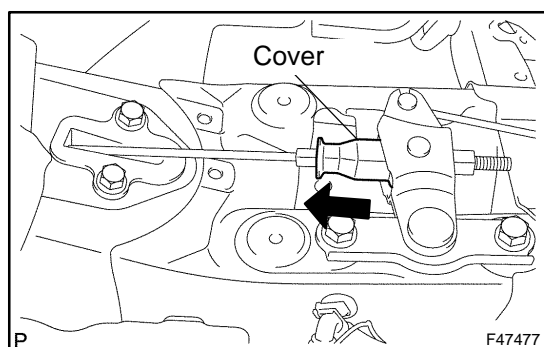


- (f) Slide the cover to the rear of the vehicle as shown in the illustration.

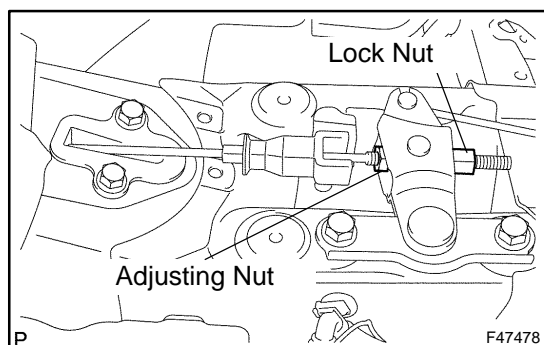

- (g) Depress the parking brake pedal 5 clicks. Hold the adjusting nut using a wrench and loosen the lock nut.
- (h) Release the parking brake pedal.
- (i) Turn the lock nut and the adjusting nut until parking brake travel falls within the specified range.  
**Torque: 12.5 N·m (127 kgf·cm, 9 ft·lbf)**
- (j) Count the number of clicks after depressing and releasing the parking brake pedal 3 to 4 times.
- (k) Check whether the parking brake drags or not.

- (l) When operating the parking brake pedal, check that the parking brake pedal indicator light comes on.

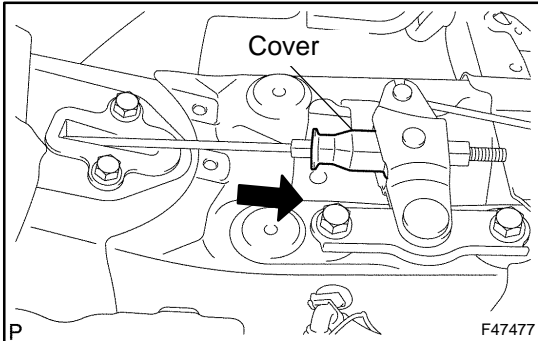

- (m) Return the cover to the original position as shown in the illustration.
- (n) Install the front floor cross member reinforcement sub-assy LH with 8 bolts.  
**Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)**
- (o) Install the front floor footrest (see page 33-6).