

# WIPER AND WASHER SYSTEM

6605A-08

## PRECAUTION

### 1. PRECAUTION FOR WASHER NOZZLE (4WAY TYPE) HANDLING

- (a) Do not adjust the washer nozzle with a safety pin, etc. as the washer nozzle tip is made of resin and could be damaged. Be sure to use SST for adjustment.  
SST 95060-10010
- (b) When the washer nozzle is clogged with wax, etc., do not use metal objects such as a safety pin to clean the washer nozzle hole. Be sure to use a soft resin brush, etc.

### NOTICE FOR INITIALIZATION:

**When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.**

System Name	See page
Power Window Control System	<a href="#">01-28</a>

### NOTICES FOR HYBRID SYSTEM ACTIVATION:

- When the warning lamp is illuminated or the battery has been disconnected and reconnected, pressing the power switch may not start the system on the first try. If so, press the power switch again.
- With the power switch's power mode changed to ON (IG), disconnect the battery. If the key is not in the key slot during recollection, DTC B2799 may be output.