


REAR WIPER MOTOR ASSY

660HK-02


REPLACEMENT

1. REMOVE REAR WIPER ARM COVER
2. REMOVE REAR WIPER ARM ASSY
 - (a) Remove the nut and the rear wiper arm assy.
3. REMOVE BACK DOOR TRIM BOARD ASSY (SEE PAGE 75-33)
4. REMOVE BACK DOOR TRIM BOARD (SEE PAGE 75-33)

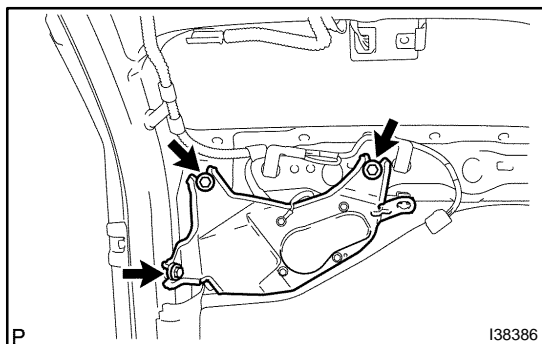


5. REMOVE REAR WIPER MOTOR ASSY
 - (a) Disconnect the connector.
 - (b) Remove the 3 bolts and the rear wiper motor assy.

6. INSTALL REAR WIPER MOTOR ASSY
 - (a) Install the rear wiper motor assy with the 3 bolts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)
 - (b) Connect the connector.

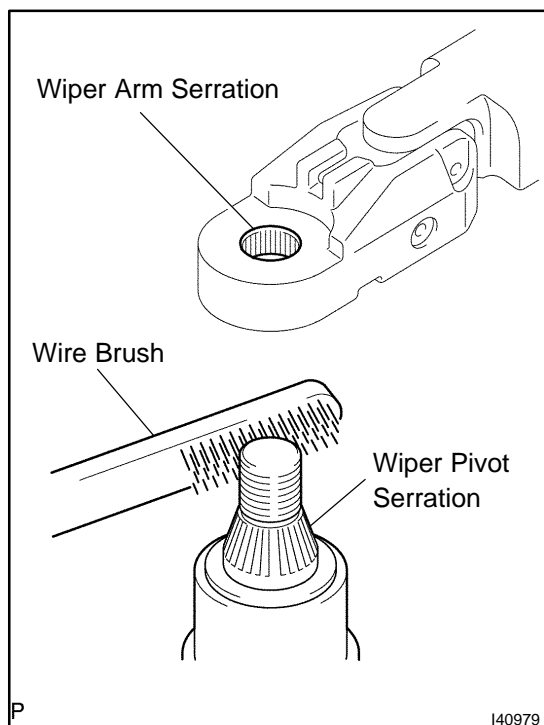

7. INSTALL REAR WIPER ARM ASSY
 - (a) Clean the rear wiper arm serration with a round file or equivalent (when reinstalling).
 - (b) Clean the rear wiper pivot serration with a wire brush.

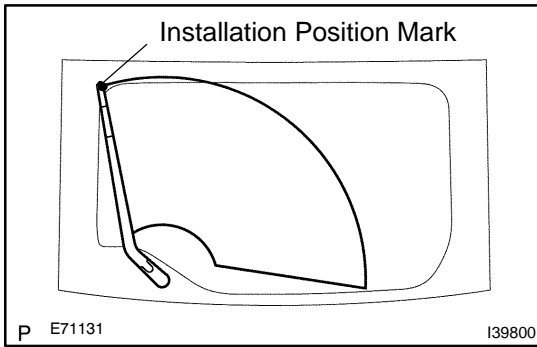

- (c) Stop the rear wiper motor assy at the automatic stop position. Install the rear wiper arm assy with the nut in the position shown in the illustration.

Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

HINT:

Hold down the arm hinge by hand in order to fasten the nut.

- (d) Operate the rear wiper while spraying water or washer fluid on the glass. Ensure that the wiper functions properly and that there is no interference with the body.