


STEERING PAD SWITCH LH

REPLACEMENT

6716U-01

HINT:

- COMPONENTS: See page 67-2
 - Installation is in the reverse order of removal.
1. **PRECAUTION (SEE PAGE 60-1)**
 2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
 3. **REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 50-8)**
 4. **REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PAGE 50-8)**
 5. **REMOVE HORN BUTTON ASSY (SEE PAGE 60-20)**

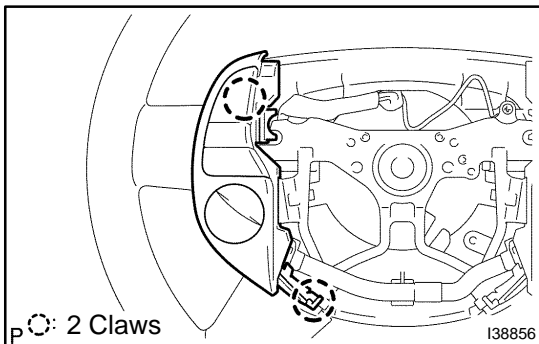

6. **REMOVE STEERING PAD SWITCH LH**
 - (a) Disengage the 2 claws and pull out the steering pad switch LH.
 - (b) Disconnect each connector and remove the steering pad switch LH.

7. **INSTALL HORN BUTTON ASSY (SEE PAGE 60-20)**
8. **CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 19-2)**
9. **PERFORM INITIALIZATION (SEE PAGE 01-28)**
10. **INSPECT HORN BUTTON ASSY (SEE PAGE 60-14)**
11. **INSPECT SRS WARNING LIGHT (SEE PAGE 05-1384)**