

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See Page
Mirror does not operate	1. ACC fuse	70-45
	2. AM1 fuse	70-45
	3. ACC-B fuse	70-45
	4. ACC relay	70-45
	5. Outer mirror switch assy	70-45
	6. Outer rear view mirror assy	70-45
	7. Wire harness	–
Mirror operates abnormally	1. ACC fuse	70-45
	2. AM1 fuse	70-45
	3. ACC-B fuse	70-45
	4. ACC relay	70-45
	5. Outer mirror switch assy	70-48
	6. Outer rear view mirror assy	70-45
	7. Wire harness	–