



## OVERHAUL

### HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

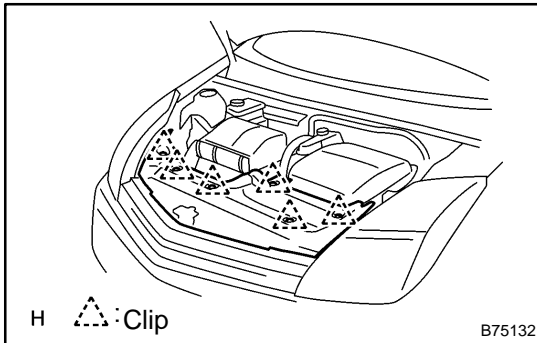

- 1. REMOVE RADIATOR SUPPORT OPENING COVER**
  - (a) Remove the 6 clips and radiator support opening cover.

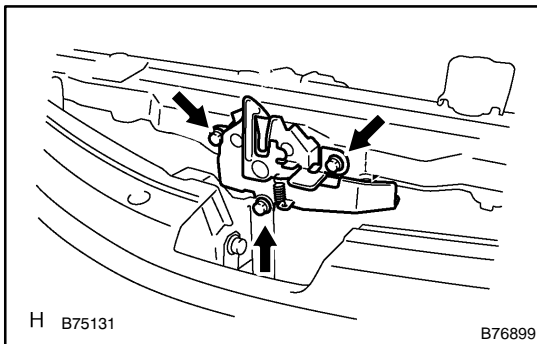


- 2. REMOVE HOOD LOCK ASSY**
  - (a) Remove the 3 bolts and hood lock.
  - (b) Remove the lock control cable.
- 3. REMOVE HOOD SUPPORT ROD**
  - (a) Remove the rod.
  - (b) Using a clip remover, remove the holder and retainer.
- 4. REMOVE HOOD INSULATOR**
  - (a) Using a clip remover remove the 6 clips and insulator.

## 5. REMOVE HOOD LOCK CONTROL CABLE ASSY


- Remove the front bumper cover (see page 76-2).
- Remove the front fender liner (see page 76-2).
- Using the screwdriver, disconnect the cable clamps as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

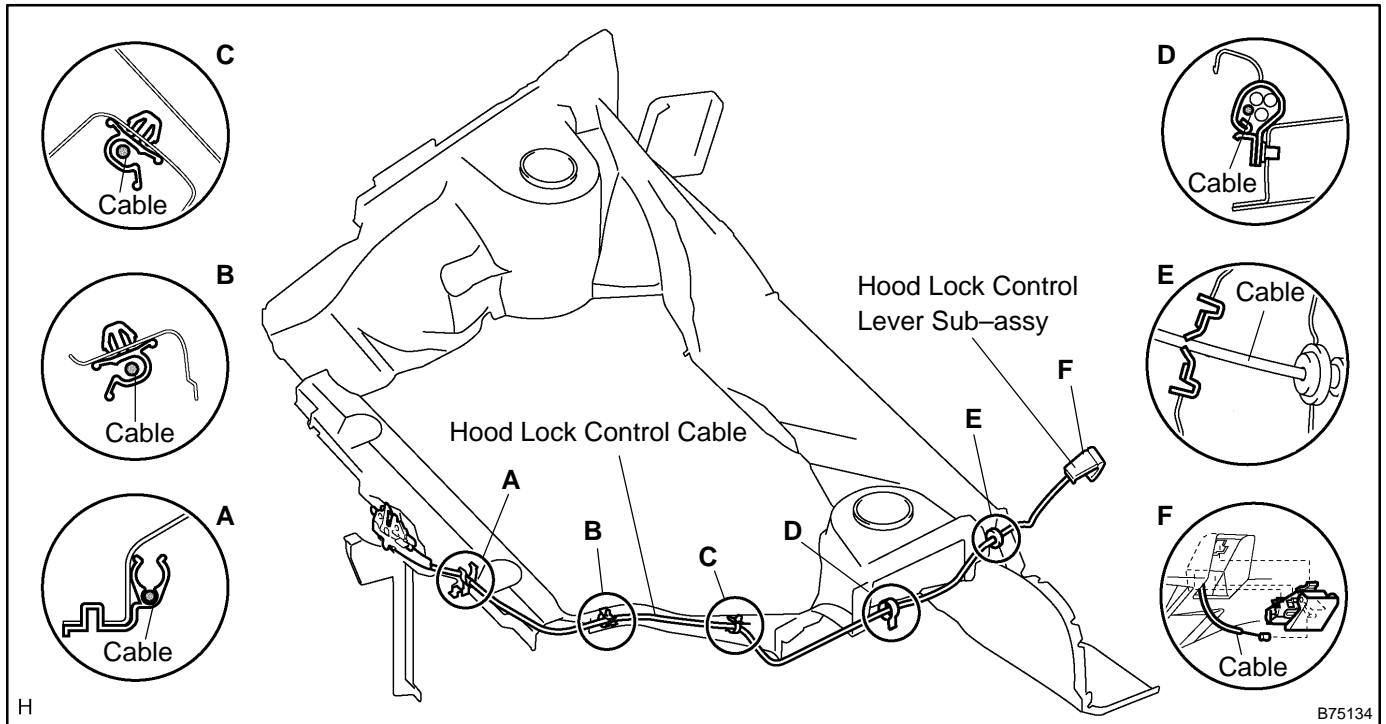

- Disconnect the cable.

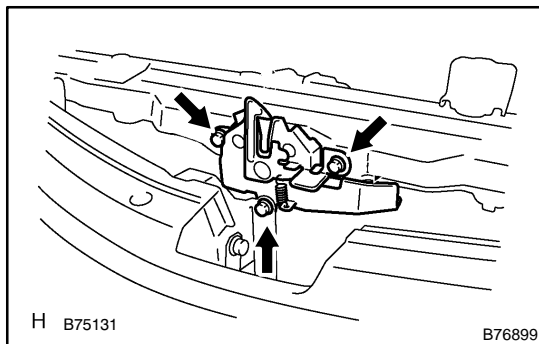

## 6. INSTALL HOOD LOCK ASSY

- Connect the hood lock control cable.
- Install the lock with the 3 bolts.  
**Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)**
- Adjust the hood lock (see page 75-2).