

■ DAYTIME RUNNING LIGHT SYSTEM

- This system is designed to automatically activate the headlight Lo beams during the daytime to keep the car highly visible to other vehicles. This system is controlled by the body ECU.
- The daytime running light system operates the low-beam headlights during the daytime by dimming them approximately 80%.
- Upon receiving a daytime running light system actuation signal from the body ECU, the daytime running light relay dims the low-beam headlights to approximately 80% of their normal intensity through duty cycle control.
- This system is enabled when the conditions given below are met.
 - Power switch ON condition
 - Parking brake switch OFF condition
 - Light control switch OFF, TAIL or AUTO condition (only when headlights-on control is not performed by the automatic light control system).
 - Hybrid system “READY” signal input (Hybrid system stand by condition)

► System Diagram ◀

