


■ AUTOMATIC LIGHT CONTROL SYSTEM

- When the light control switch is in the AUTO position, the automatic light control sensor detects the ambient light and automatically turns the headlights and taillights ON or OFF accordingly.
- This system is controlled by the Body ECU.

► System Diagram ◀

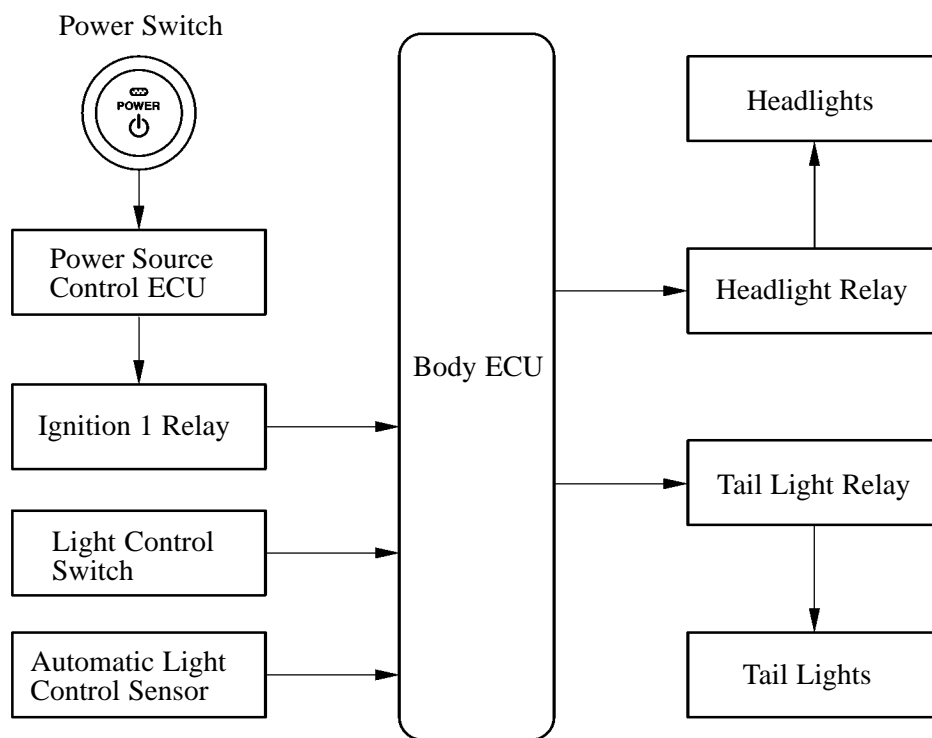

255BE14

■ LIGHT AUTO TURN-OFF SYSTEM

- When the power switch is turned from READY, IG-ON or ACC to OFF position and driver's door is opened with the taillights and headlights on, this system automatically turns them off.
- This system is controlled by the Body ECU.