

■ FUNCTION

The outside rear view mirror has following functions:

Function	Outline
Electrical Remote Control type Mirror	When the mirror control switch is operated, this function moves the mirror surface vertically or laterally to enable the driver to attain an optimal mirror angle. Setting the mirror master switch to the “R” position operates the right mirror, and to the “L” position operates the left mirror.
Rear Window Defogger-linked Mirror Heater	This function also automatically turns ON the mirror heater when the rear window defogger switch is turned ON. After 15 minutes have elapsed from the time this function has been activated, the rear window defogger turns OFF automatically, and the mirror heater also turns OFF.