


■ SYSTEM OPERATION

1. Basic Operation

This system activates as described in the diagram below when one of items place in the respective state.

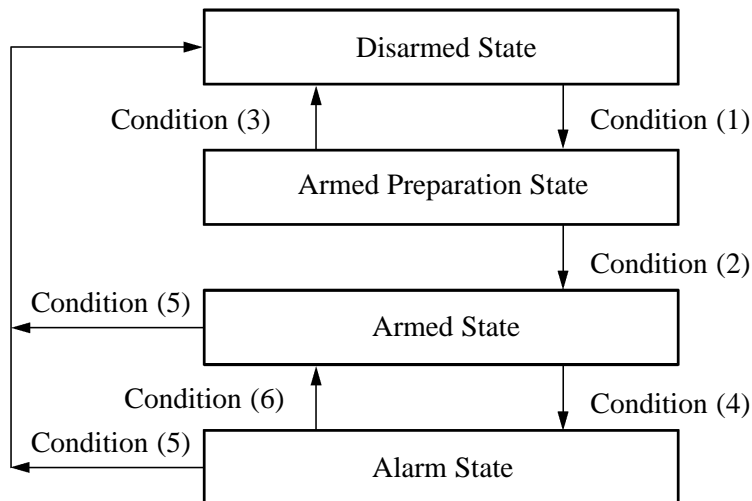

187BE40

Condition	Item
Condition (1)	<ul style="list-style-type: none"> • There is no key in the key slot. • When the doors, engine hood, and back door are all closed, all doors are closed by the wireless door lock remote control system or smart entry & start system*. • When the doors, engine hood, and back door are all closed, the mechanical key is used to lock all doors. • When all the doors are locked, one of the doors, engine hood, or back door is changed from “open” to “close”, and all the doors are locked and closed.
Condition (2)	When the doors, engine hood, and back door are all closed and locked, and 30 seconds have elapsed.
Condition (3)	<ul style="list-style-type: none"> • When one of the doors, engine hood, or back door is changed from “close” to “open”. • When one of the doors, engine hood, or back door is changed from “lock” to “unlock”. • When the key is inserted in the key slot. • When a terminal is disconnected from the battery and reconnected. • When the power switch is pressed.
Condition (4)	<ul style="list-style-type: none"> • Any door, engine hood, or back door is opened. • Any door is unlocked with something other than the mechanical key, transmitter or smart entry & start system*. • The engine hood is opened. • A terminal is disconnected from the battery and reconnected. • The wiring harness is directly connected as if the turn the power switch ON.
Condition (5)	<ul style="list-style-type: none"> • The transmitter or smart entry & start system* is used to unlock the doors. • The mechanical key is used to unlock the doors. • The key is inserted in the key slot and the power switch is turned ON.
Condition (6)	After approximately 60 seconds of the alarm time have elapsed.

*: Optional Equipment

2. Forced Door Lock Operation

When the system starts the alarm state, and one of the doors is subsequently unlocked, the forced door lock operation forcefully outputs a door lock signal to prevent intrusion into the vehicle. This operation becomes activated when all the starting conditions listed below have been met, and stops when one of the stopping conditions occurs.

Condition	Item
Starting Condition	The theft deterrent system is in the alarm state.
	There is no key inserted in the key slot.
	If one of the front doors is unlocked.
Stopping Condition	All doors are locked.
	The warning ends after approximately 60 seconds.
	The key is inserted in the key slot.