

ABBREVIATIONS

The following abbreviations are used in this manual.

A/C	=	Air Conditioning
ABS	=	Anti-Lock Brake System
ACIS	=	Acoustic Control Induction System
BA	=	Brake Assist
BEAN	=	Body Electronics Area Network
CAN	=	Controller Area Network
CHS	=	Coolant Heat Storage System
DC	=	Direct Current
EB	=	Electrical Brake
ECU	=	Electronic Control Unit
EPS	=	Electric Motor Power Steering
ESA	=	Electronic Spark Advance
EVAP	=	Evaporative Emission
HID	=	High Intensity Discharge
HV	=	Hybrid Vehicle
IC	=	Integrated Circuit
J/B	=	Junction Block
LH	=	Left-Hand
MPX	=	Multiplex
PTC	=	Positive Temperature Coefficient
R/B	=	Relay Block
RH	=	Right-Hand
SFI	=	Sequential Multiport Fuel Injection
SOC	=	State of Charge
SRS	=	Supplemental Restraint System
SW	=	Switch
TEMP.	=	Temperature
TRAC	=	Traction Control
VSC	=	Vehicle Stability Control
VSV	=	Vacuum Switching Valve
VVT-i	=	Variable Valve Timing-intelligent
w/	=	With
w/o	=	Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.