
 


## J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

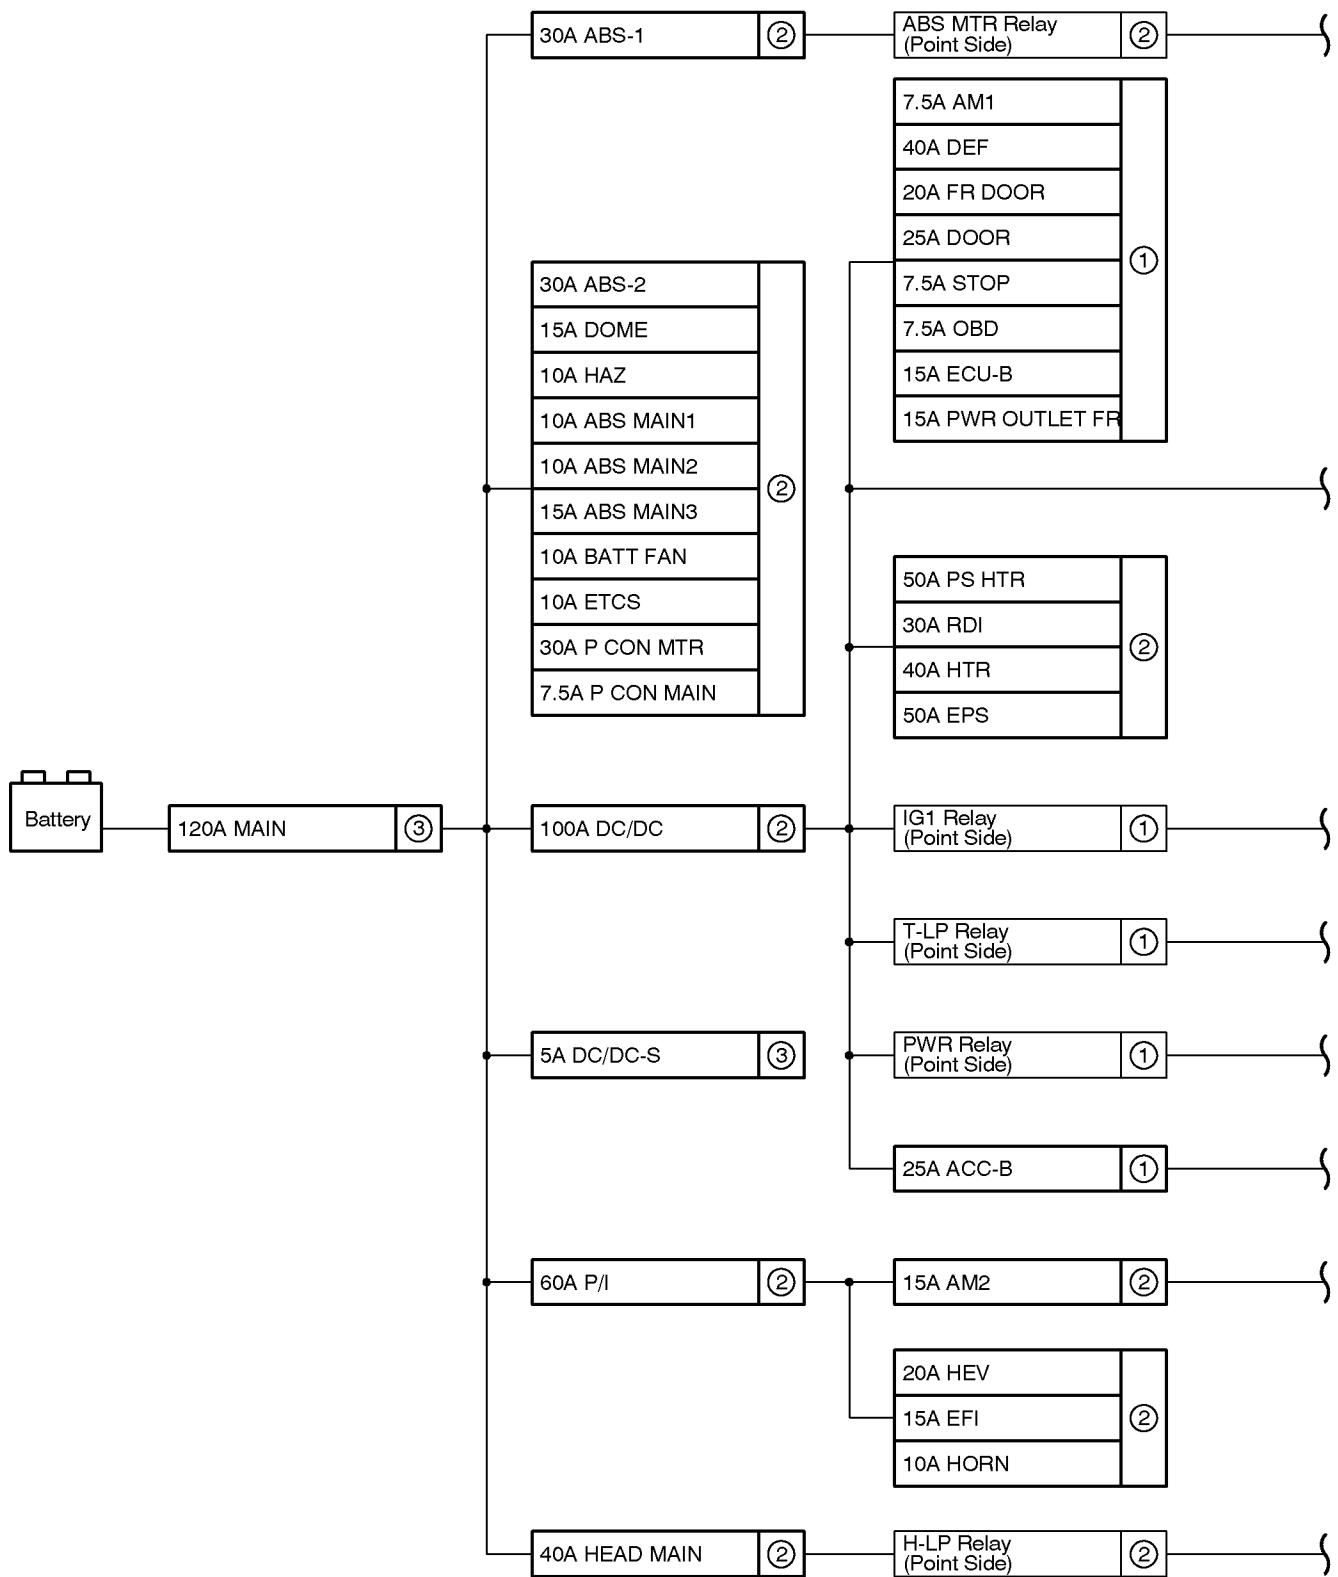

## Example




 
 


Parts

Code or Location



Location

Electrical Source

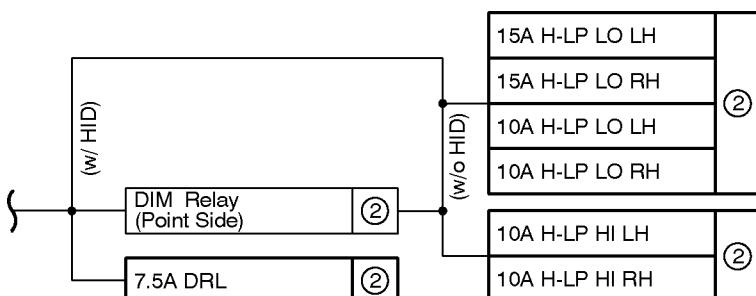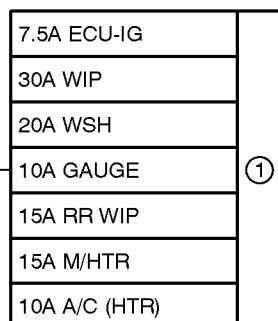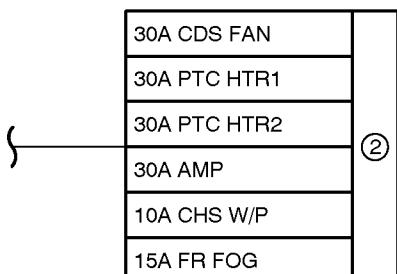

## [LOCATION]

- ① : Driver Side J/B (See Page 28)
- ② : Engine Room R/B or J/B (See Page 22)
- ③ : Fusible Link Block (See Page 27)
- ④ : Fuse Holder (F17 on See Page 47)

## J POWER SOURCE (Current Flow Chart)

### Engine Room R/B, Engine Room J/B (See Page 22)

Fuse		System	Page
7.5A	DRL	Headlight	148
7.5A	P CON MAIN	Push Button Start System and Hybrid Vehicle Immobilizer System Shift Control System Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	82 256 216
10A	ABS MAIN1	Brake Control System TOYOTA Hybrid System	290 96
10A	ABS MAIN2	Brake Control System TOYOTA Hybrid System	290 96
10A	BATT FAN	TOYOTA Hybrid System	96
10A	CHS W/P	Air Conditioner Engine Control	352 132
10A	ETCS	Cruise Control Engine Control TOYOTA Hybrid System	270 132 96
10A	HAZ	Turn Signal and Hazard Warning Light	166
10A	H-LP HI LH	Headlight	148
10A	H-LP HI RH	Headlight	148
10A	H-LP LO LH (w/o HID)	Headlight	148
10A	H-LP LO RH (w/o HID)	Headlight	148
10A	HORN	Horn Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System) Theft Deterrent Wireless Door Lock Control (w/o Smart Entry System)	310 216 246 234
15A	ABS MAIN3	Brake Control System	290
15A	AM2	Engine Control Ignition Interior Light Push Button Start System and Hybrid Vehicle Immobilizer System Shift Control System TOYOTA Hybrid System	132 128 170 82 256 96
15A	DOME	Air Conditioner Automatic Glare-Resistant EC Mirror Automatic Light Control Back-Up Light Brake Control System Clock Combination Meter Cruise Control Door Lock Control Engine Control	352 322 160 186 290 312 342 270 210 132

\* These are the page numbers of the first page on which the related system is shown.

Fuse	System	Page
15A	DOME	EPS
		324
		Garage Door Opener
		148
		Headlight
		156
		Headlight Beam Level Control
		170
		Interior Light
		190
		Key Reminder
		164
		Light Auto Turn Off System
		242
		Luggage Compartment Door Opener
		336
		Multi-Display and Audio System (Built-in Amplifier)
		326
		Multi-Display and Audio System (Separate Amplifier)
		206
		Power Window
		82
		Push Button Start System and Hybrid Vehicle Immobilizer System
		318
		Rear Window Defogger and Mirror Heater
		194
		Seat Belt Warning
		256
		Shift Control System
		216
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)
		303
		SRS
		178
		Taillight and Illumination
		246
		Theft Deterrent
		96
		TOYOTA Hybrid System
		234
		Wireless Door Lock Control (w/o Smart Entry System)
15A	EFI	Cruise Control
		270
		Engine Control
		132
		TOYOTA Hybrid System
15A	FR FOG	Front Fog Light
15A	H-LP LO LH (w/ HID)	Headlight
15A	H-LP LO RH (w/ HID)	Headlight
20A	HEV	Cruise Control
		270
		Push Button Start System and Hybrid Vehicle Immobilizer System
		82
		Shift Control System
		256
		TOYOTA Hybrid System
30A	ABS-1	Brake Control System
30A	ABS-1	TOYOTA Hybrid System
290	96	
30A	ABS-2	Brake Control System
30A	ABS-2	TOYOTA Hybrid System
290	96	
30A	AMP	Multi-Display and Audio System (Separate Amplifier)
30A	CDS FAN	Radiator Fan and Condenser Fan
348		
30A	P CON MTR	Push Button Start System and Hybrid Vehicle Immobilizer System
30A	P CON MTR	Shift Control System
82		
30A	PTC HTR1	Air Conditioner
352		
30A	PTC HTR2	Air Conditioner
352		

\* These are the page numbers of the first page on which the related system is shown.

## J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
30A	RDI	Engine Control Radiator Fan and Condenser Fan TOYOTA Hybrid System	132 348 96
40A	HEAD MAIN	Automatic Light Control Headlight Headlight Beam Level Control Light Auto Turn Off System Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System) Theft Deterrent Wireless Door Lock Control (w/o Smart Entry System)	160 148 156 164 216 246 234
40A	HTR	Air Conditioner TOYOTA Hybrid System	352 96
50A	EPS	EPS	284
50A	PS HTR	Air Conditioner	352
60A	P/I	Engine Control Ignition Interior Light	132 128 170
100A	DC/DC	Automatic Light Control Interior Light Light Auto Turn Off System Power Window Push Button Start System and Hybrid Vehicle Immobilizer System Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System) Taillight and Illumination Theft Deterrent TOYOTA Hybrid System Wireless Door Lock Control (w/o Smart Entry System)	160 170 164 206 82 216 178 246 96 234

## Fusible Link Block (See Page 27)

Fuse		System	Page
5A	DC/DC-S	TOYOTA Hybrid System	96
120A	MAIN	Engine Control Ignition Interior Light TOYOTA Hybrid System	132 128 170 96

## Driver Side J/B (See Page 28)

Fuse		System	Page
7.5A	ACC	Clock Interior Light Key Reminder Light Auto Turn Off System Multi-Display and Audio System (Built-in Amplifier)	312 170 190 164 336

\* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
7.5A	ACC	Multi-Display and Audio System (Separate Amplifier)	326
		Multiplex Communication System (AVC-LAN Bus)	78
		Multiplex Communication System (BEAN Bus)	70
		Multiplex Communication System (CAN Bus)	74
		Power Window	206
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Remote Control Mirror	316
		Shift Control System	256
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
7.5A	AM1	Theft Deterrent	246
		Interior Light	170
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Shift Control System	256
7.5A	ECU-IG	TOYOTA Hybrid System	96
		Automatic Glare-Resistant EC Mirror	322
		Automatic Light Control	160
		Brake Control System	290
		Door Lock Control	210
		Engine Control	132
		EPS	284
		Garage Door Opener	324
		Headlight	148
		Interior Light	170
		Key Reminder	190
		Light Auto Turn Off System	164
		Luggage Compartment Door Opener	242
		Multi-Display and Audio System (Built-in Amplifier)	336
		Multi-Display and Audio System (Separate Amplifier)	326
		Multiplex Communication System (AVC-LAN Bus)	78
		Multiplex Communication System (BEAN Bus)	70
		Multiplex Communication System (CAN Bus)	74
		Power Window	206
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Radiator Fan and Condenser Fan	348
		Shift Control System	256
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
		Theft Deterrent	246
		TOYOTA Hybrid System	96
		Wireless Door Lock Control (w/o Smart Entry System)	234
7.5A	IGN	Brake Control System	290
		Combination Meter	342
		Cruise Control	270
		Engine Control	132

\* These are the page numbers of the first page on which the related system is shown.

## J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
7.5A	IGN	EPS Push Button Start System and Hybrid Vehicle Immobilizer System Shift Control System SRS TOYOTA Hybrid System	284 82 256 303 96
7.5A	OBD	Engine Control TOYOTA Hybrid System	132 96
7.5A	PANEL	Clock Taillight and Illumination	312 178
7.5A	STOP	Brake Control System Cruise Control EPS Push Button Start System and Hybrid Vehicle Immobilizer System Shift Control System Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System) Stop Light TOYOTA Hybrid System	290 270 284 82 256 216 184 96
10A	A/C(HTR)	Air Conditioning Rear Window Defogger and Mirror Heater	352 318
10A	GAUGE	Air Conditioning Back-Up Light Brake Control System Combination Meter Cruise Control Engine Control EPS Headlight Headlight Beam Level Control Key Reminder Luggage Compartment Door Opener Multi-Display and Audio System (Built-in Amplifier) Multi-Display and Audio System (Separate Amplifier) Power Window Push Button Start System and Hybrid Vehicle Immobilizer System Rear Window Defogger and Mirror Heater Seat Belt Warning Shift Control System Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System) SRS Taillight and Illumination TOYOTA Hybrid System Turn Signal and Hazard Warning Light	352 186 290 342 270 132 284 148 156 190 242 336 326 206 82 318 194 256 216 303 178 96 166

\* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	TAIL	Front Fog Light Taillight and Illumination	162 178
15A	ECU-B	Air Conditioning Headlight Multi-Display and Audio System (Built-in Amplifier) Multi-Display and Audio System (Separate Amplifier) Multiplex Communication System (AVC-LAN Bus) Multiplex Communication System (BEAN Bus) Multiplex Communication System (CAN Bus) Rear Window Defogger and Mirror Heater Theft Deterrent	352 148 336 326 78 70 74 318 246
15A	M/HTR	Rear Window Defogger and Mirror Heater	318
15A	PWR OUTLET	Power Outlet	314
15A	PWR OUTLET FR	Power Outlet	314
15A	RR WIP	Rear Wiper and Washer	202
20A	FR DOOR	Power Window	206
20A	WSH	Front Wiper and Washer Rear Wiper and Washer	198 202
25A	ACC-B	Push Button Start System and Hybrid Vehicle Immobilizer System	82
25A	DOOR	Door Lock Control Luggage Compartment Door Opener Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System) Theft Deterrent Wireless Door Lock Control (w/o Smart Entry System)	210 242 216 246 234
30A	POWER	Power Window	206
30A	WIP	Front Wiper and Washer	198
40A	DEF	Rear Window Defogger and Mirror Heater	318

### Fuse Holder (F17 on See Page 47)

Fuse		System	Page
30A	ABS	Brake Control System TOYOTA Hybrid System	290 96

\* These are the page numbers of the first page on which the related system is shown.