


Light Auto Turn Off System

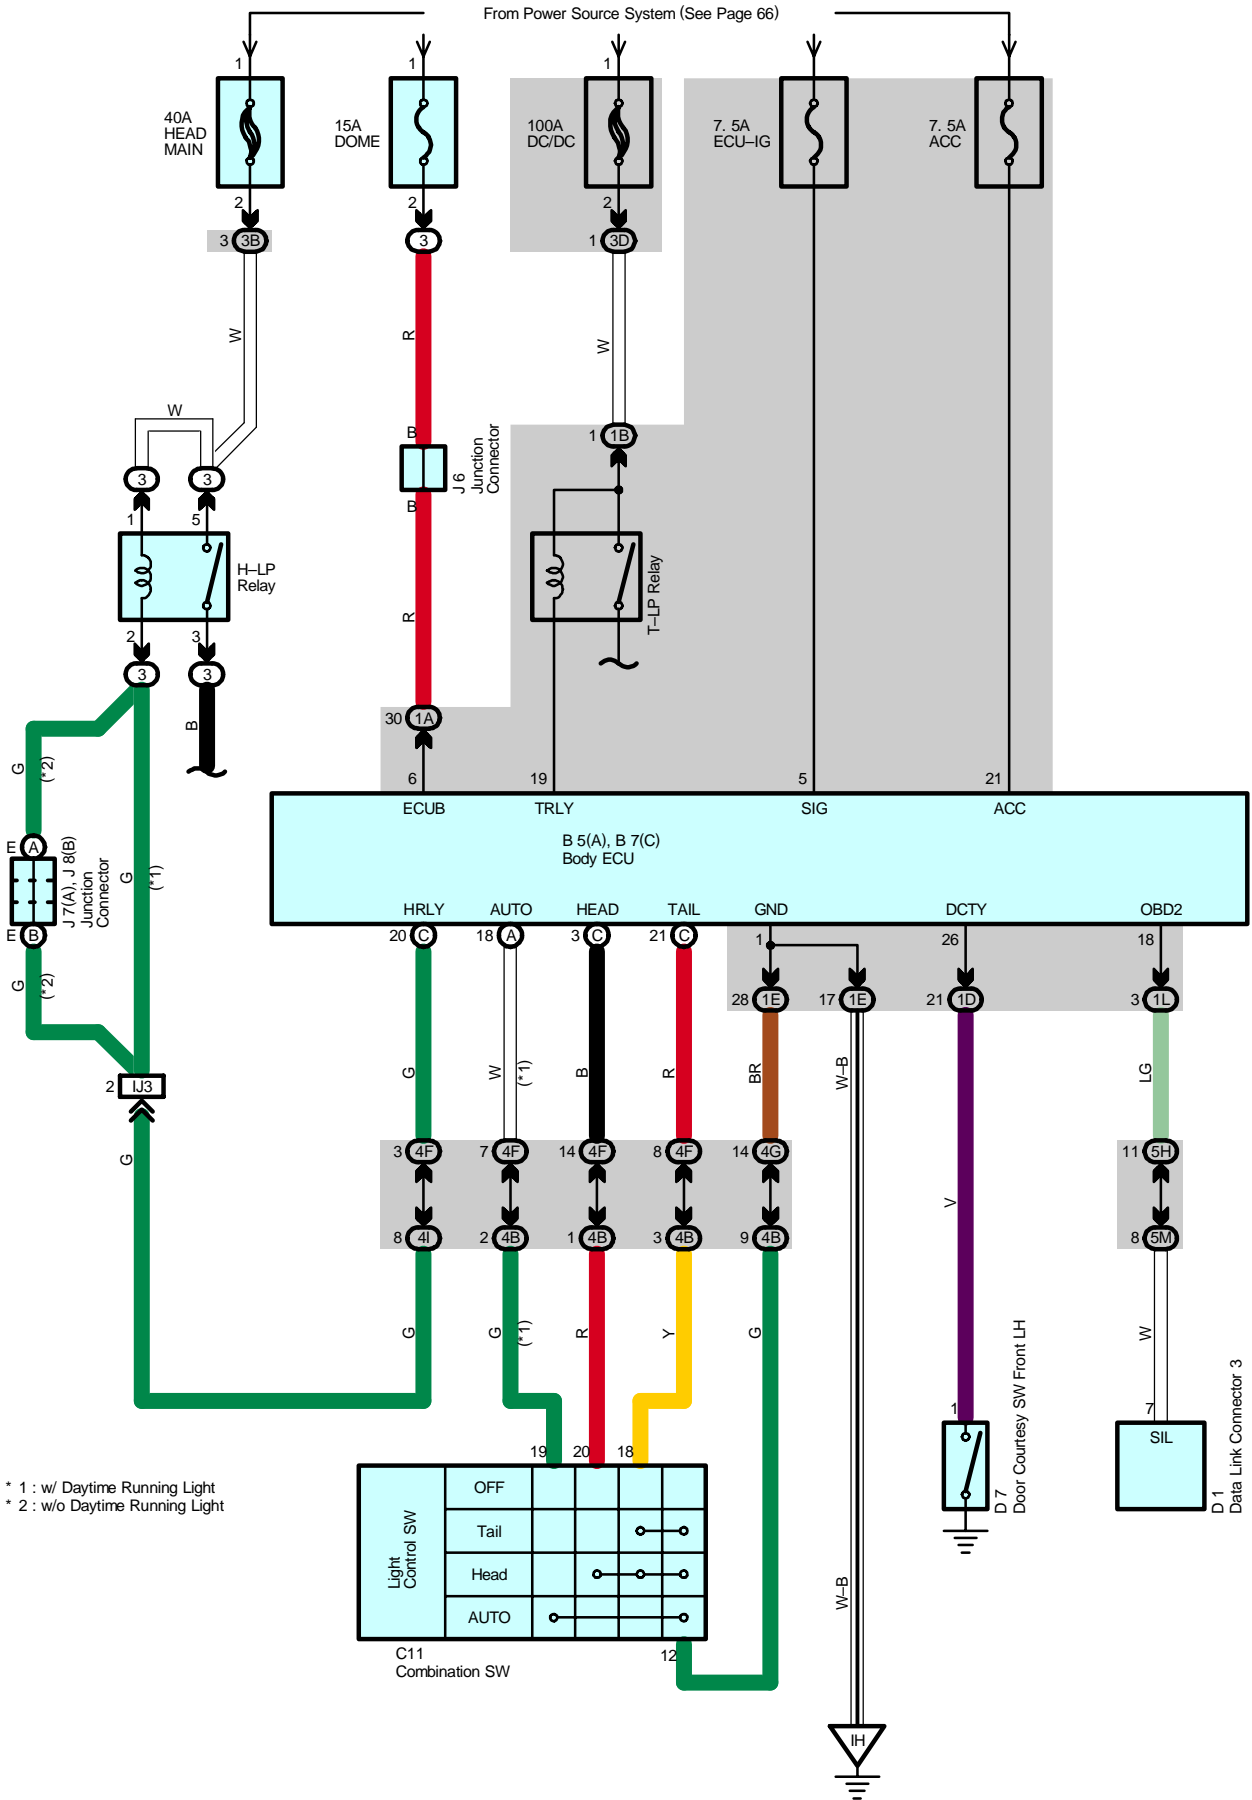

* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light

System Outline

"The light auto turn off system" automatically turns off the taillights or headlights when the driver's side door is opened, which prevents the lights from being left on.

If the power SW is pushed to OFF from IG ON with the headlights or taillights on, signal is input to the TERMINAL SIG of the body ECU. If the driver's side door is opened at that time, the signal from the door courtesy SW front LH is sent to the TERMINAL DCTY of the body ECU. The signal turns off the headlights, front fog lights or taillights.

Service Hints

Body ECU

6-Ground : Always approx. 12 volts

5-Ground : Approx. 12 volts with the power SW at IG ON position

1-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page		
B5	A	46	D1	47	J7	A	48
B7	C	46	D7	50	J8	B	48
C11	47	J6	48				

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
3B	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3D		
4B	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4F		
4G		
4I		
5H	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5M		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ3	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)

: Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH