



Service Hints**C9 Clock**

1-Ground : Always approx. 12 volts

4-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position

2-Ground : Always continuity

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
C9	47	J6	48	J24	48

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1M		
5G		
5H	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5K		
5L		

 : **Ground Points**

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH