


Power Outlet

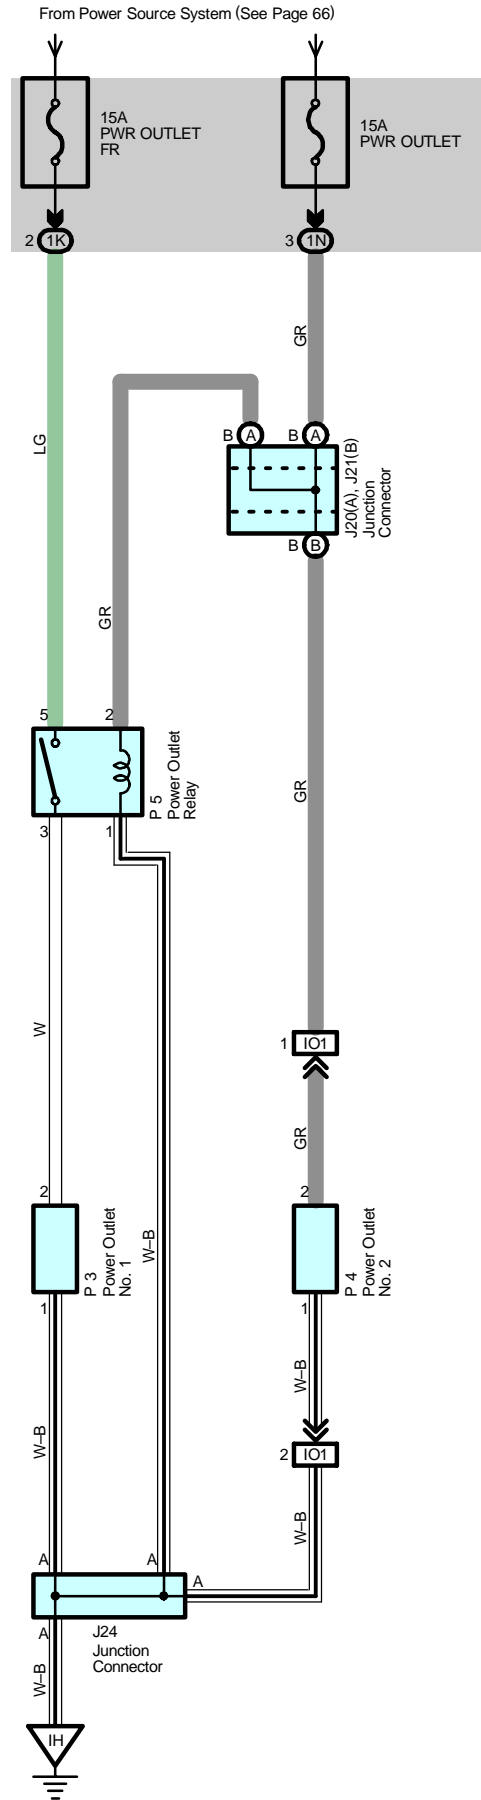

Service Hints

P5 Power Outlet Relay

3-5 : Closed with the power SW at ACC ON or IG ON position

: Parts Location

Code		See Page	Code	See Page	Code	See Page
J20	A	48	J24	48	P4	49
J21	B	48	P3	49	P5	49

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1K	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1N		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IO1	58	Instrument Panel Wire and Instrument Panel No.4 Wire (Front Console Box LH)

: Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH