


# Automatic Glare-Resistant EC Mirror

From Power Source System (See Page 66)

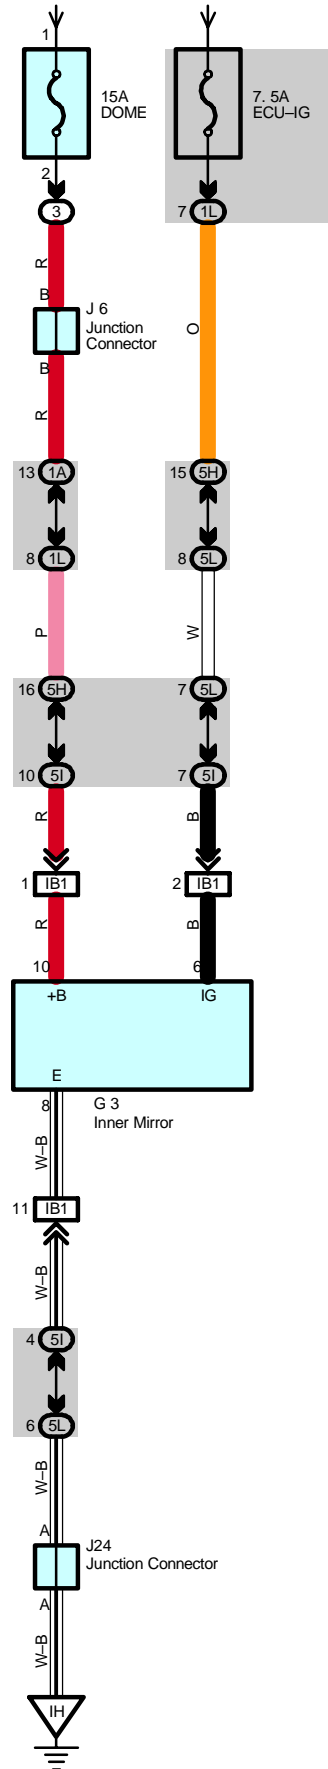

## Service Hints

### G3 Inner Mirror

10-Ground : Always approx. 12 volts

8-Ground : Always continuity

6-Ground : Approx. 12 volts with the power SW at IG ON position

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
G3	51	J6	48	J24	48

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
5H	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5I		
5L		

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	56	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)

### : Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH