

INITIALIZATION

1. RESET (INITIALIZE) POWER WINDOW REGULATOR MOTOR (DRIVER SIDE)

NOTICE:

- **Resetting the power window regulator motor (initializing the pulse sensor) is necessary if: 1) the battery terminal cable is disconnected; 2) the power window regulator master switch assembly, wire harness, power window regulator switch, power window regulator assembly and power window regulator motor are replaced or removed/installed; or 3) the POWER fuse, FR DOOR fuse, GAUGE fuse and ECU-IG fuses are replaced. If resetting is not performed, the master switch assembly will not be able to operate the AUTO operation function, jam protection function and remote operation function.**
- (a) Turn the power switch ON (IG).
 - (b) Open the power window halfway by pressing the power window switch.
 - (c) Fully pull up on the switch until the power window is fully closed and continue to hold the switch for at least 1 second.
 - (d) Check that the AUTO UP/DOWN function operates normally.
- If the AUTO UP/DOWN function operates normally, reset operations are complete. If abnormal, follow steps (e) to (g) below.
- (e) Disconnect the negative battery terminal cable for 10 seconds.
 - (f) Connect the battery terminal cable.
 - (g) Perform steps (a) to (d) again.