


IGNITION SWITCH COMPONENTS

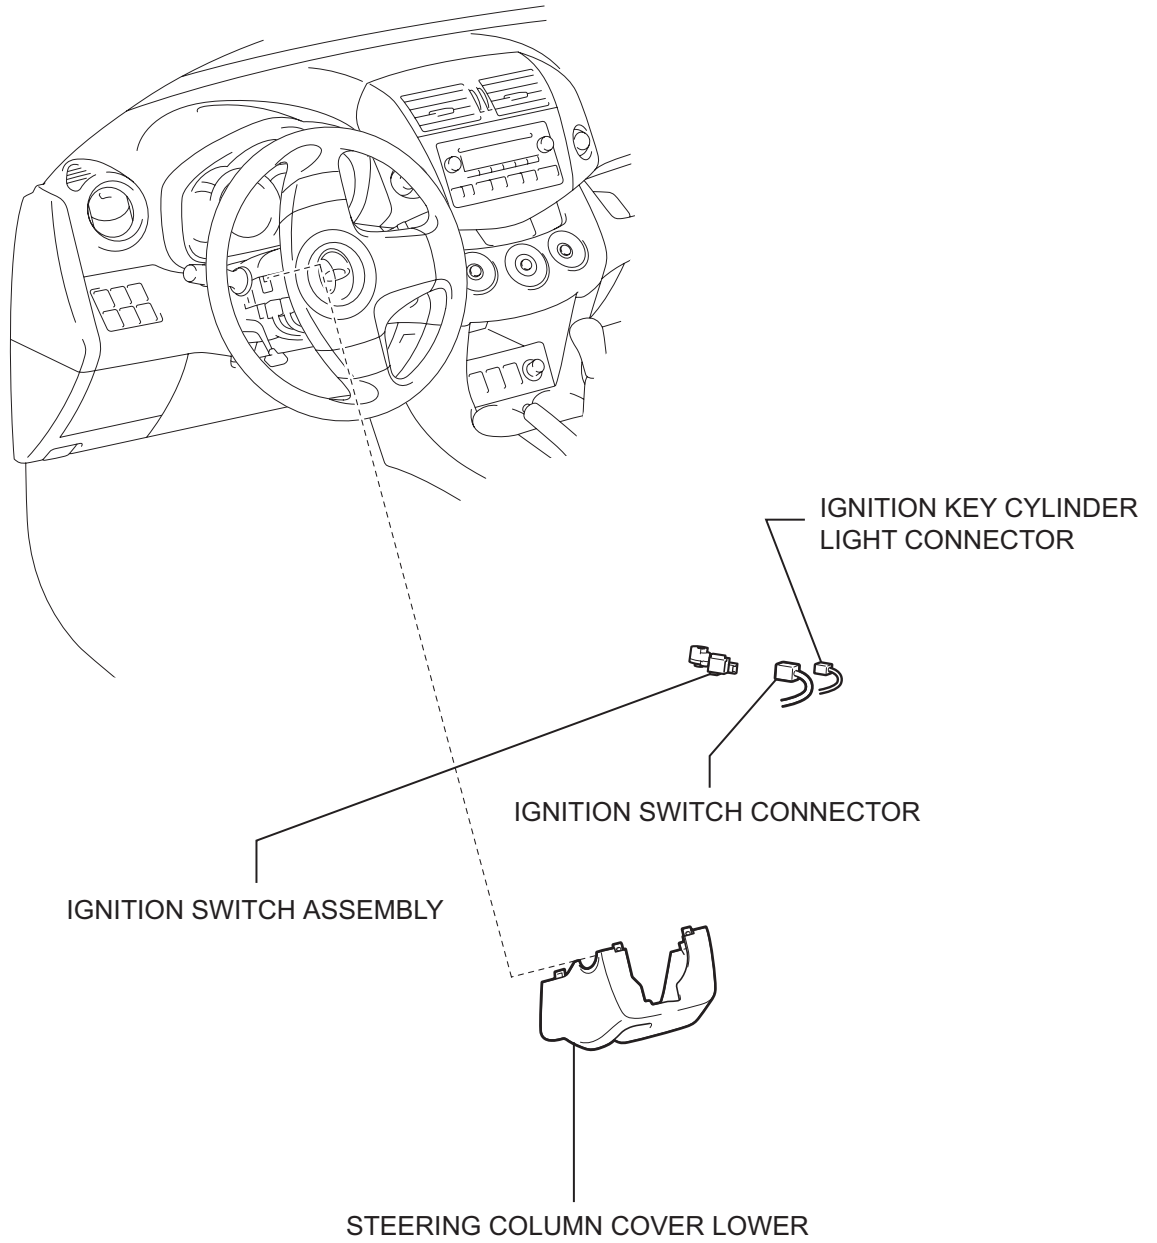

REMOVAL


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. **REMOVE STEERING COLUMN COVER LOWER**

- (a) Detach the 4 claws, release the tilt lever and remove the steering column cover lower.

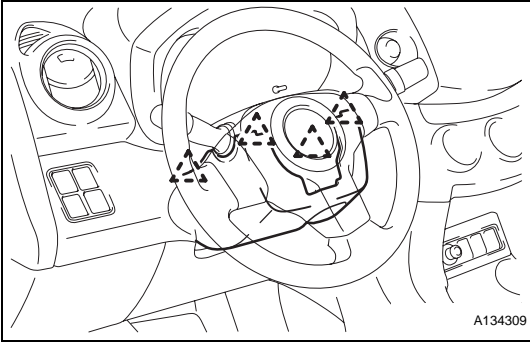


3. **REMOVE IGNITION SWITCH ASSEMBLY**

- (a) Disconnect the ignition switch connector.
- (b) Disconnect the ignition key cylinder light connector.

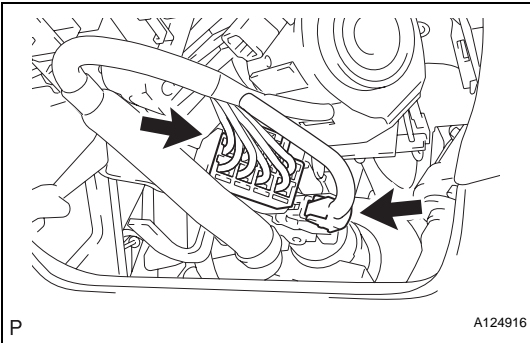

- (c) Remove the 2 screws and ignition switch.

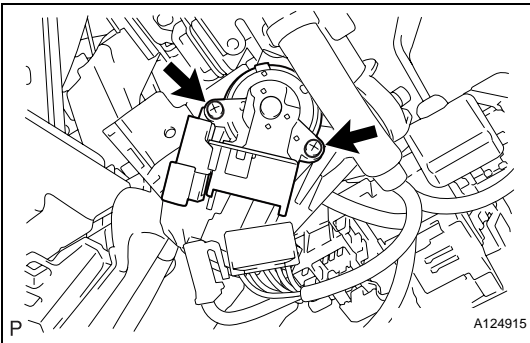

INSPECTION

1. **INSPECT IGNITION SWITCH ASSEMBLY**

- (a) Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
-	LOCK	10 kΩ or higher
2 (AM1) - 3 (ACC)	ACC	Below 1 Ω
2 (AM1) - 3 (ACC) 2 (AM1) - 4 (IG1) 6 (IG2) - 7 (AM2)	ON	Below 1 Ω
1 (ST1) - 2 (AM1) 1 (ST1) - 4 (IG1) 6 (IG2) - 7 (AM2) 6 (IG2) - 8 (ST2)	START	Below 1 Ω

