


## INSTALLATION

### 1. INSTALL THERMOSTAT

- (a) Install a new gasket to the thermostat.
- (b) Install the thermostat with the jiggle valve facing upward.

HINT:

The jiggle valve can be set to within 10° of either side of the upward position.

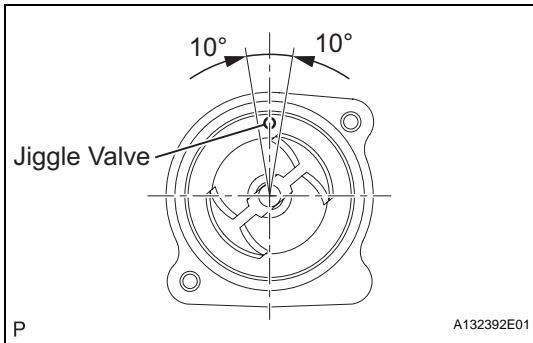


P

A132392E01

### 2. INSTALL WATER INLET

- (a) Install the water inlet with the 2 nuts.  
Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)

### 3. CONNECT NO. 2 RADIATOR HOSE

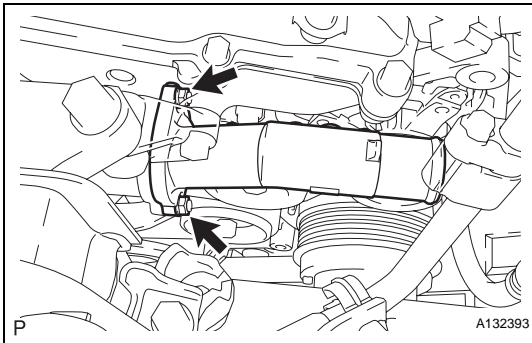


P

A132393

### 4. INSTALL NO. 2 IDLER PULLEY SUB-ASSEMBLY


- (a) Install the No. 2 idler pulley cover plate and No. 2 idler pulley with the bolt.  
Torque: 43 N\*m (438 kgf\*cm, 32 ft.\*lbf)

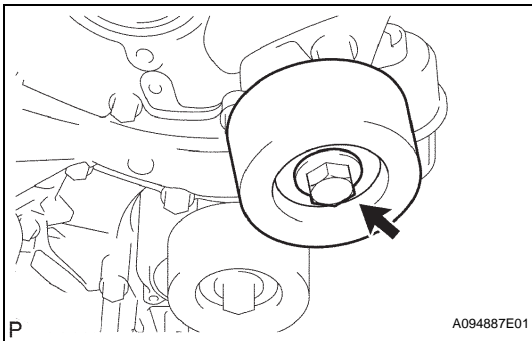

P

A094887E01

### 5. INSTALL FRONT NO. 1 ENGINE MOUNTING BRACKET LH (See page [CO-15](#))

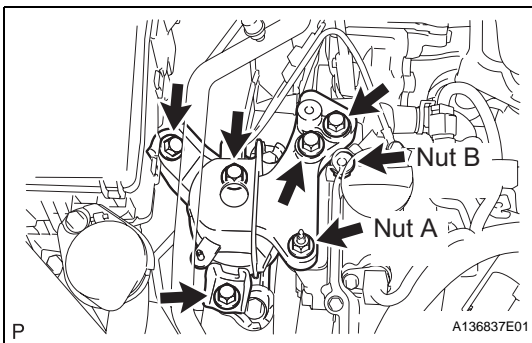


P

A136837E01

### 6. INSTALL ENGINE MOUNTING INSULATOR RH

- (a) Install the engine mounting insulator RH with the 2 nuts and 5 bolts.  
Torque: 95 N\*m (969 kgf\*cm, 70 ft.\*lbf) for bolt  
95 N\*m (969 kgf\*cm, 70 ft.\*lbf) for nut A  
52 N\*m (530 kgf\*cm, 38 ft.\*lbf) for nut B

### 7. INSTALL FAN AND GENERATOR V BELT (See page [EM-8](#))

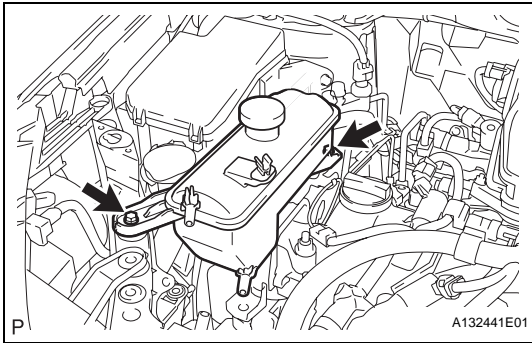

8. **INSTALL RADIATOR RESERVOIR TANK**
  - (a) Install the radiator reservoir with the 2 bolts.  
Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)
9. **INSTALL RADIATOR SUPPORT OPENING COVER**  
(See page [EM-42](#))
10. **INSTALL V-BANK COVER SUB-ASSEMBLY** (See page [EM-42](#))
11. **ADD ENGINE COOLANT** (See page [CO-8](#))
12. **CHECK FOR ENGINE COOLANT LEAKAGE** (See page [CO-1](#))
13. **INSTALL FRONT SUSPENSION MEMBER REINFORCEMENT RH** (See page [EM-9](#))
14. **INSTALL ENGINE UNDER COVER REAR RH** (See page [EM-41](#))
15. **INSTALL NO. 1 ENGINE UNDER COVER** (See page [EM-41](#))
16. **INSTALL FRONT WHEEL RH**