


# CANISTER COMPONENTS

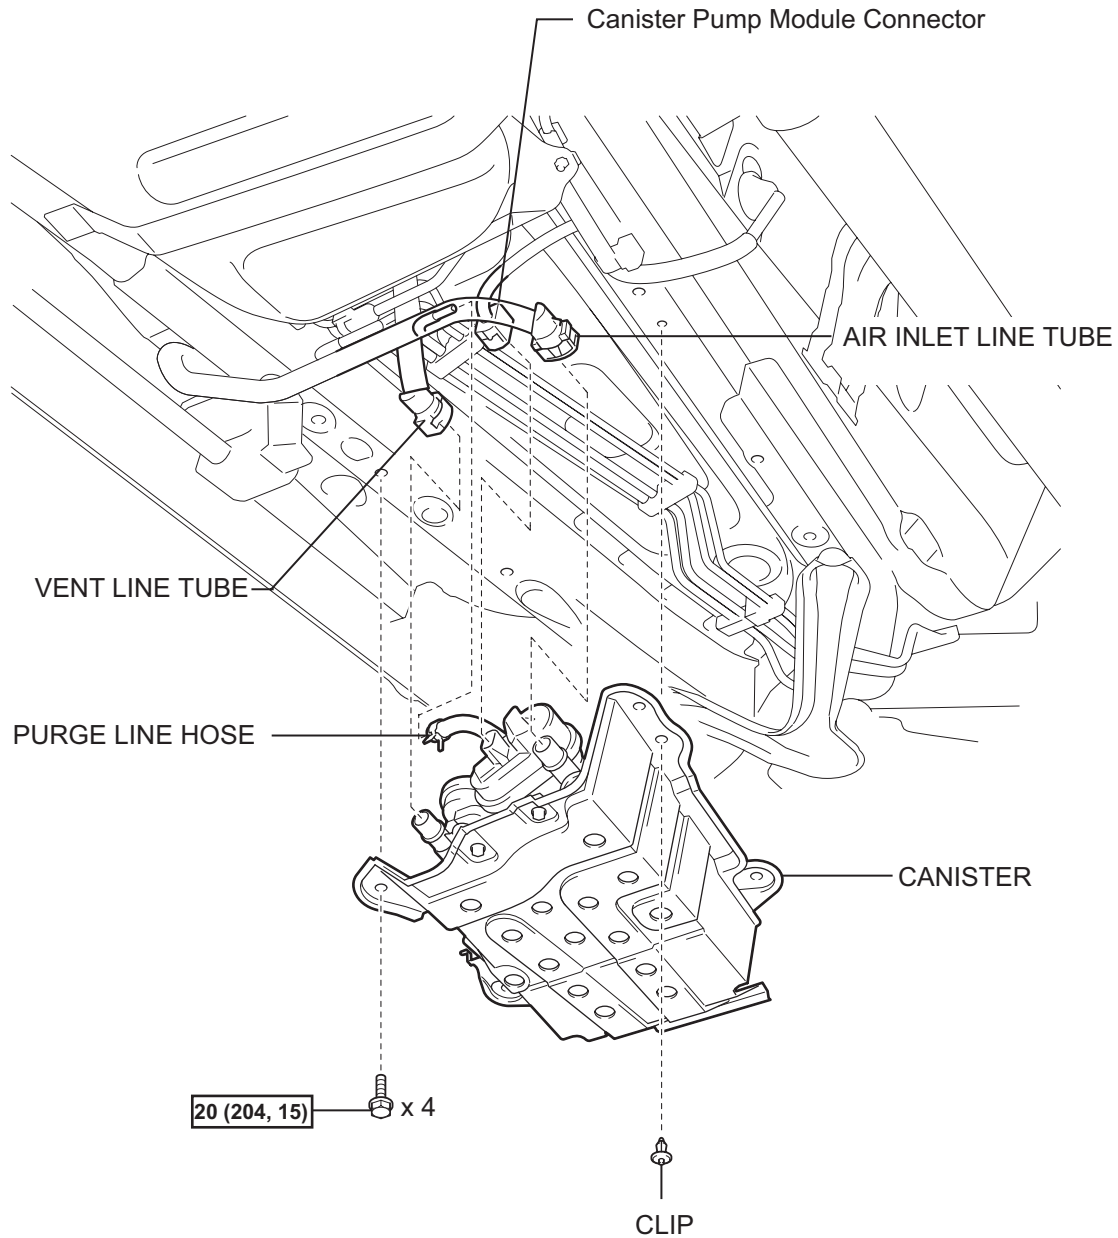

EC

**20 (204, 15)** : Specified torque

## REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

### CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.



2. REMOVE CANISTER

### NOTICE:

Remove any dirt or foreign objects before performing this work.

- (a) Disconnect the 2 tubes, hose and connector.
  - (1) Using a screwdriver, pry up the retainer.
 

HINT:  
Do not remove the retainer.
  - (2) Disconnect the purge line hose.
  - (3) Disconnect the air inlet line tube from the canister.
  - (4) Disconnect the vent line tube from the canister (leak detection pump).
  - (5) Disconnect the connector from the canister (leak detection pump).

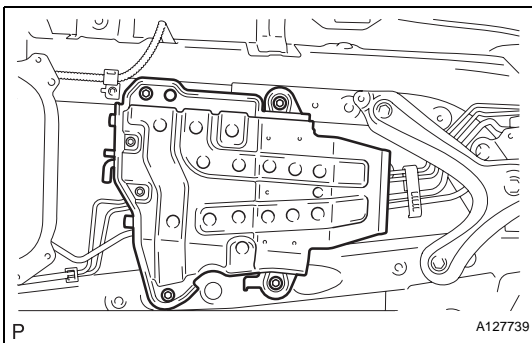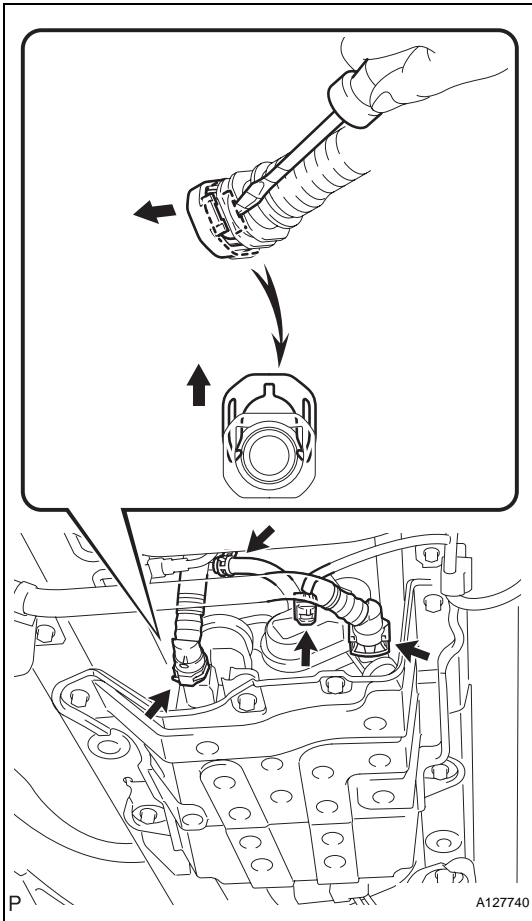

- (b) Remove the 4 bolts, clip and canister.