



FUEL TANK CAP

INSPECTION

1. INSPECT FUEL TANK CAP ASSEMBLY

- (a) Visually check that the cap and gasket are not deformed or damaged.

If the result is not as specified, replace the cap assembly or gasket.