


ENGINE COOLANT TEMPERATURE SENSOR

COMPONENTS

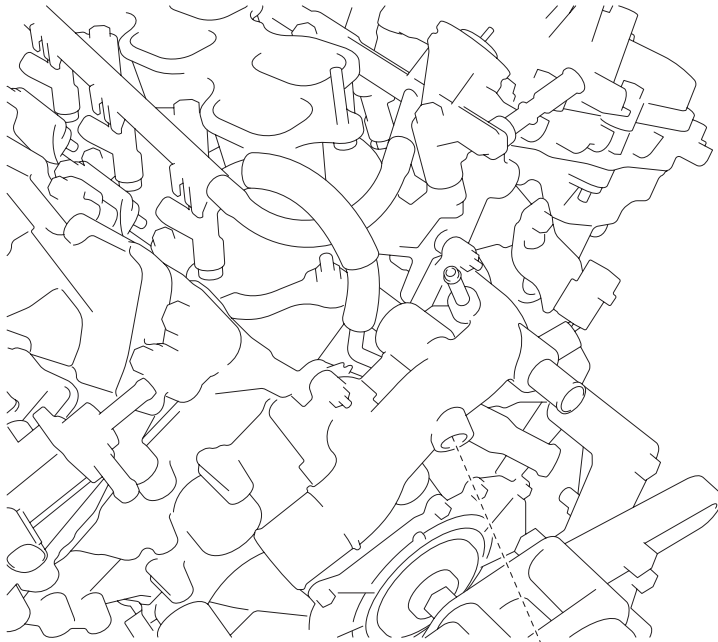

ES

● GASKET

ENGINE COOLANT TEMPERATURE SENSOR

ENGINE COOLANT TEMPERATURE SENSOR CONNECTOR

19.6 (200, 14)

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

REMOVAL

1. DRAIN ENGINE COOLANT (See page [CO-8](#))
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
3. REMOVE ENGINE COOLANT TEMPERATURE SENSOR
 - (a) Disconnect the sensor connector.
 - (b) Using SST, remove the sensor and gasket.
SST 09817-33190

