



for Bank 1

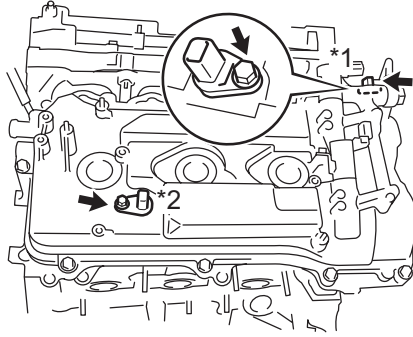

for Bank 2

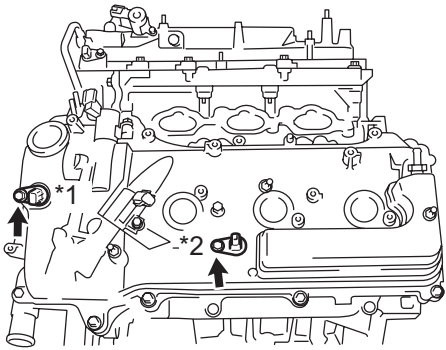

*1: for Intake Side *2: for Exhaust Side

A139005E01

INSTALLATION

1. INSTALL VVT SENSOR

- (a) Install the 4 sensors with the 4 bolts.
Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)
- (b) Connect the 4 sensor connectors.

2. INSTALL INTAKE AIR SURGE TANK ASSEMBLY (See page [EM-34](#))

3. INSTALL ENGINE ASSEMBLY

- (a) Install the engine (see page [EM-31](#)).

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL