


EXHAUST PIPE

COMPONENTS

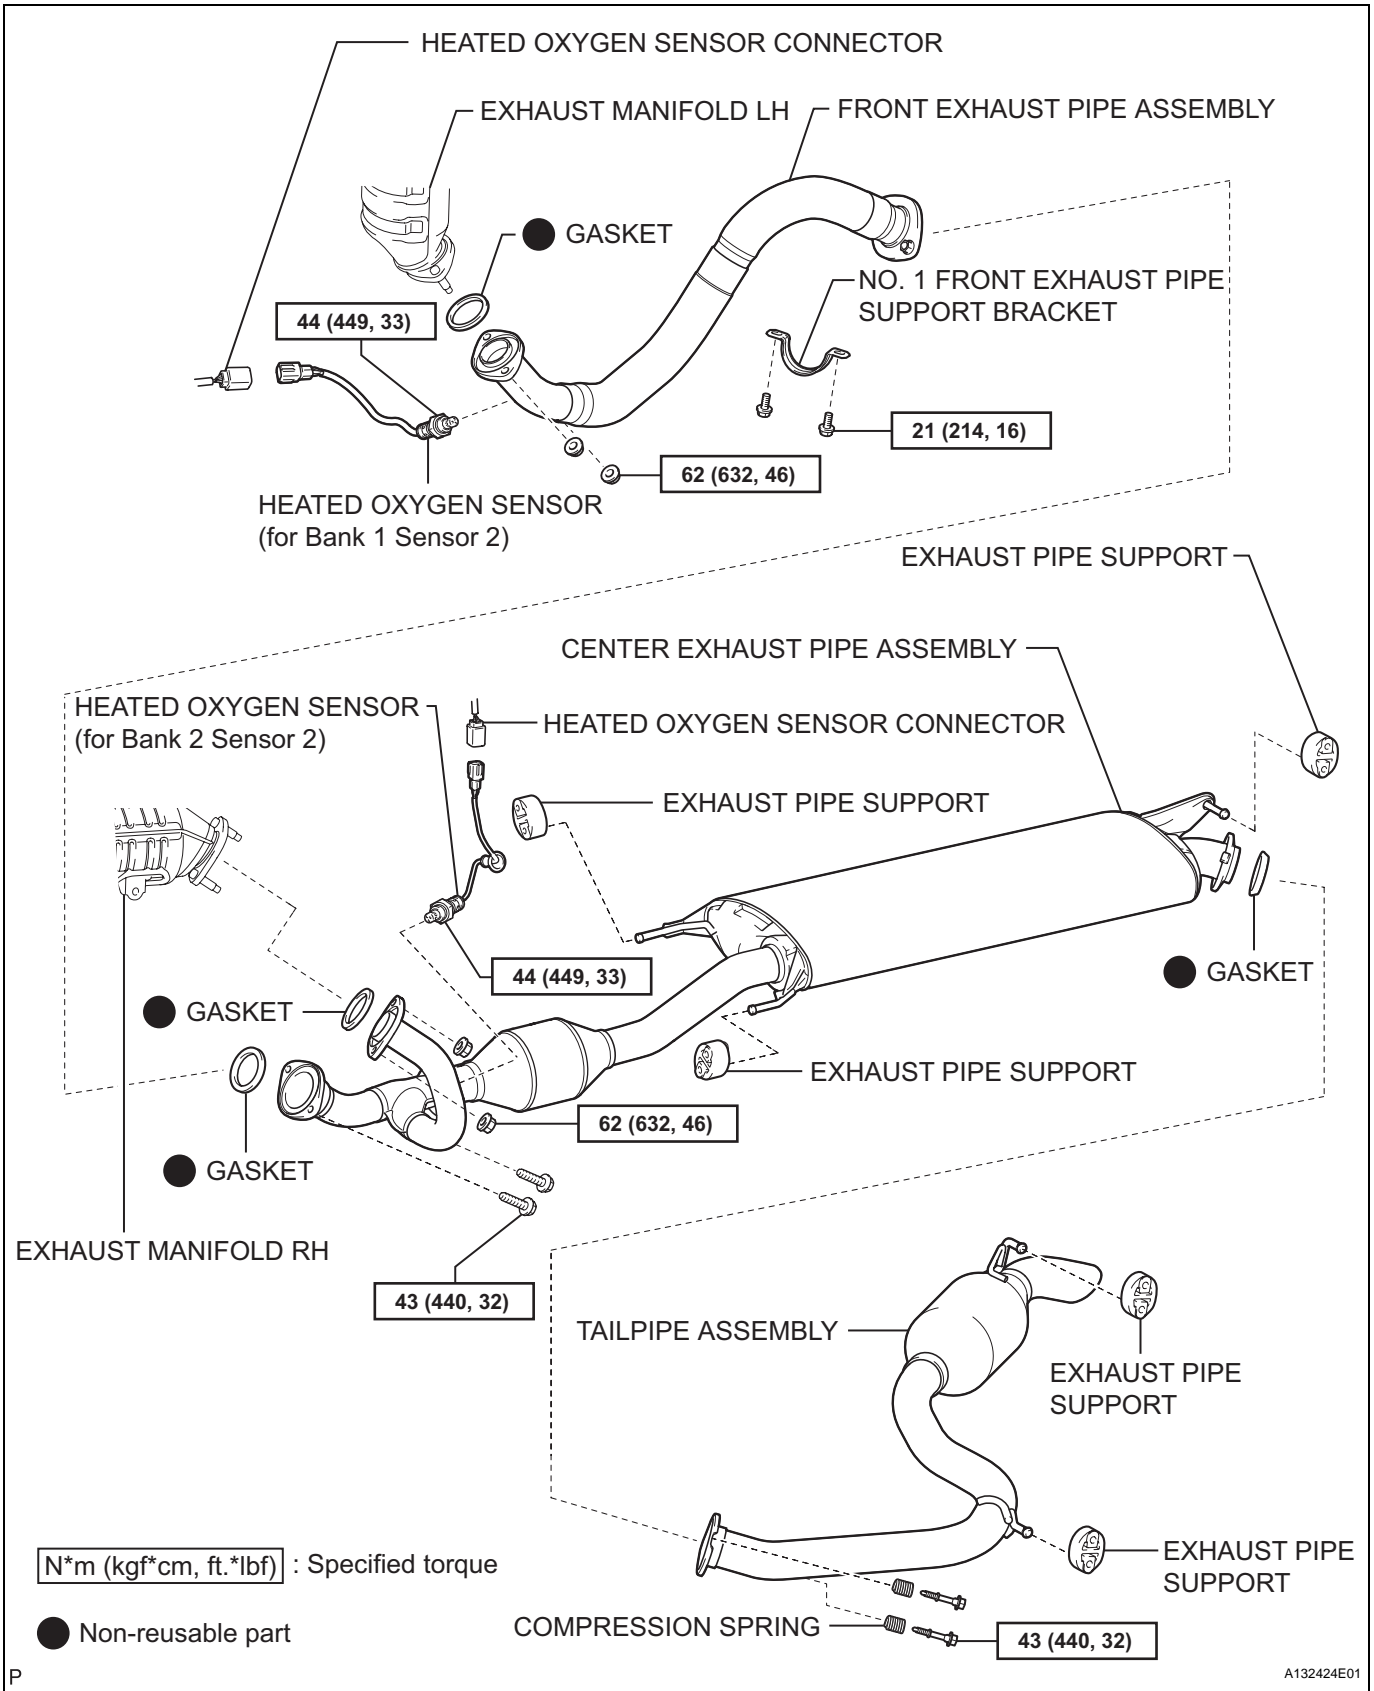

EX


REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. **REMOVE HEATED OXYGEN SENSOR (for Sensor 2)**
(See page [EC-26](#))
3. **REMOVE TAILPIPE ASSEMBLY**
 - (a) Remove the 2 bolts and 2 compression springs.
 - (b) Disconnect the 2 exhaust pipe supports and remove the tailpipe.
 - (c) Remove the gasket from the center exhaust pipe.

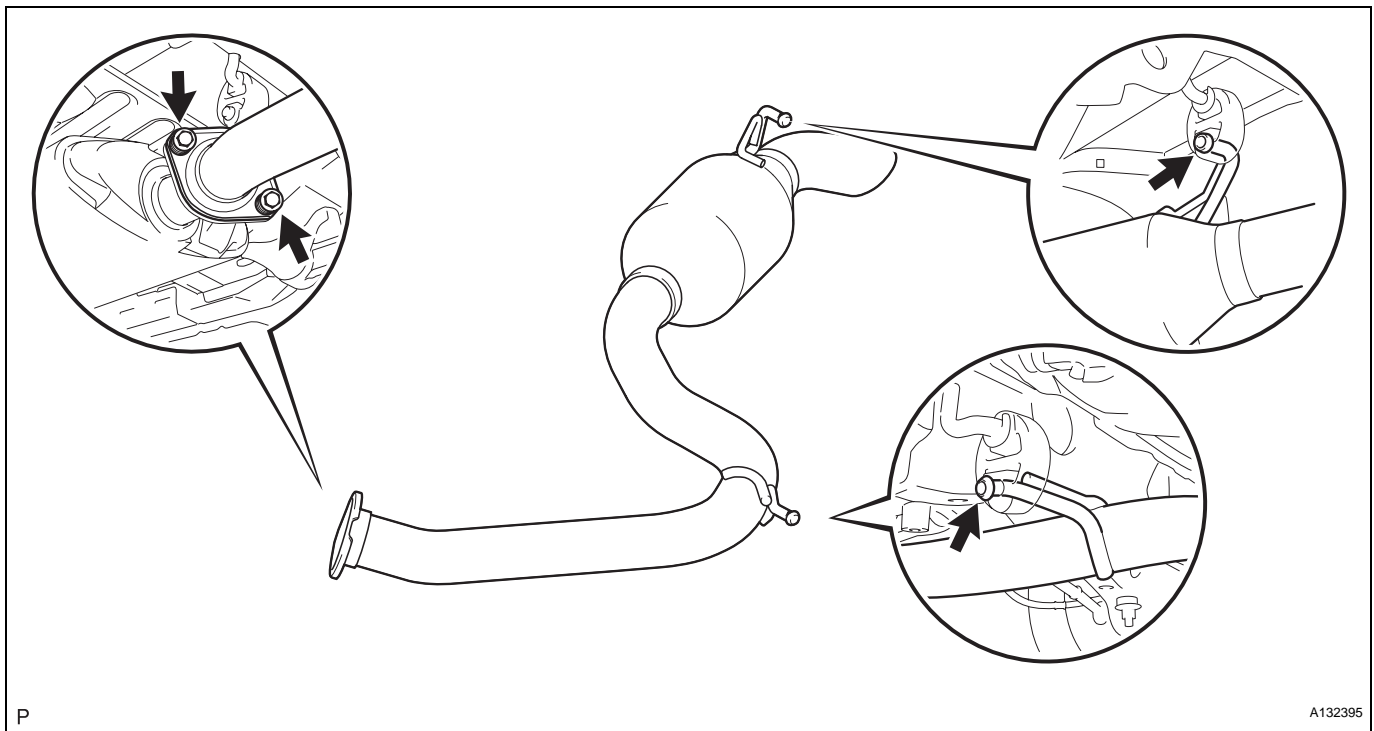

4. **REMOVE CENTER EXHAUST PIPE ASSEMBLY**

- (a) Remove the 2 bolts and 2 nuts.
- (b) Disconnect the 3 exhaust pipe supports and remove the center exhaust pipe.

(c) Remove the 2 gaskets.

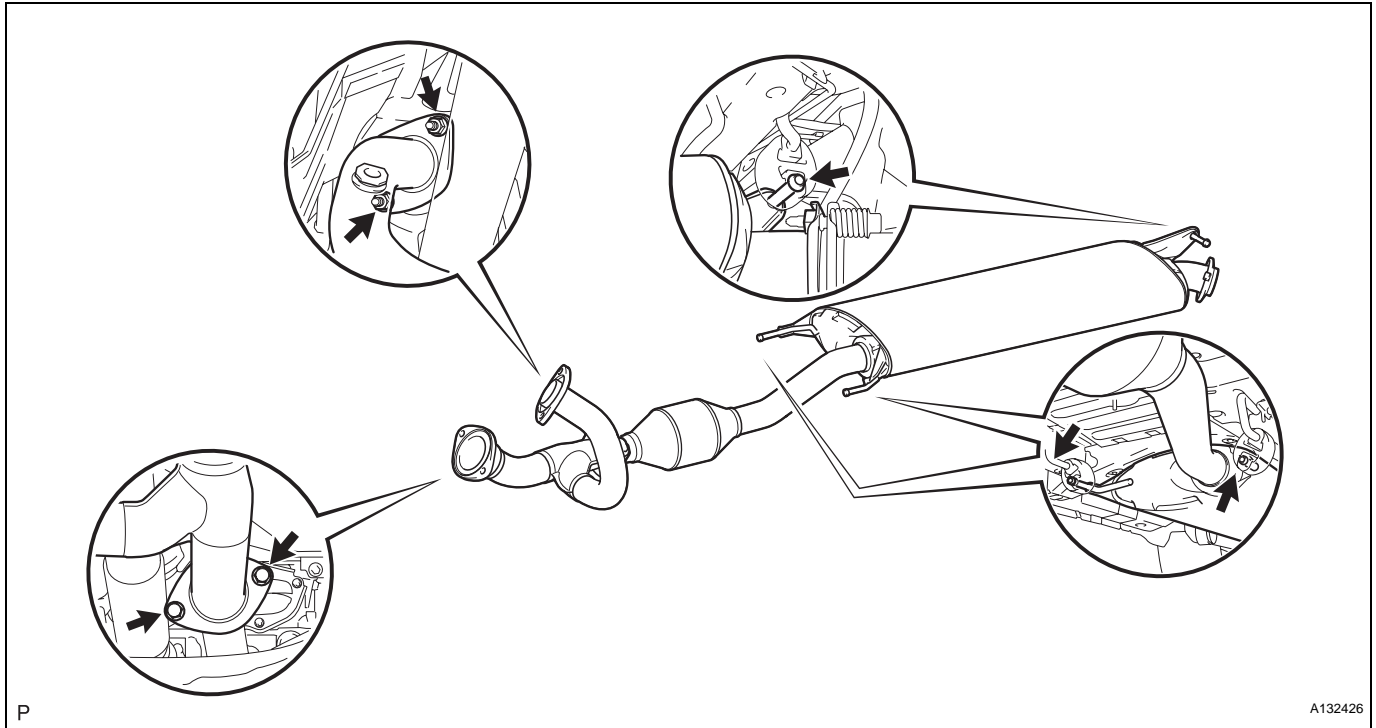

5. REMOVE NO. 1 FRONT EXHAUST PIPE SUPPORT BRACKET

(a) Remove the 2 bolts and No. 1 front exhaust pipe support bracket.

6. REMOVE FRONT EXHAUST PIPE ASSEMBLY

(a) Remove the 2 nuts and front exhaust pipe.
 (b) Remove the gasket from the exhaust manifold.

