

## INSTALLATION

1. **INSTALL FUEL PRESSURE PULSATION DAMPER**
  - (a) Apply a light coat of spindle oil or gasoline to a new O-ring, and install it to the pulsation damper.
  - (b) Install the pulsation damper to the fuel delivery pipe.
  - (c) Install the clip.
2. **INSTALL INTAKE AIR SURGE TANK ASSEMBLY (See page [EM-34](#))**
3. **INSTALL ENGINE ASSEMBLY**
  - (a) Install the engine (see page [EM-31](#)).
4. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**