


FUEL PRESSURE PULSATION DAMPER

COMPONENTS

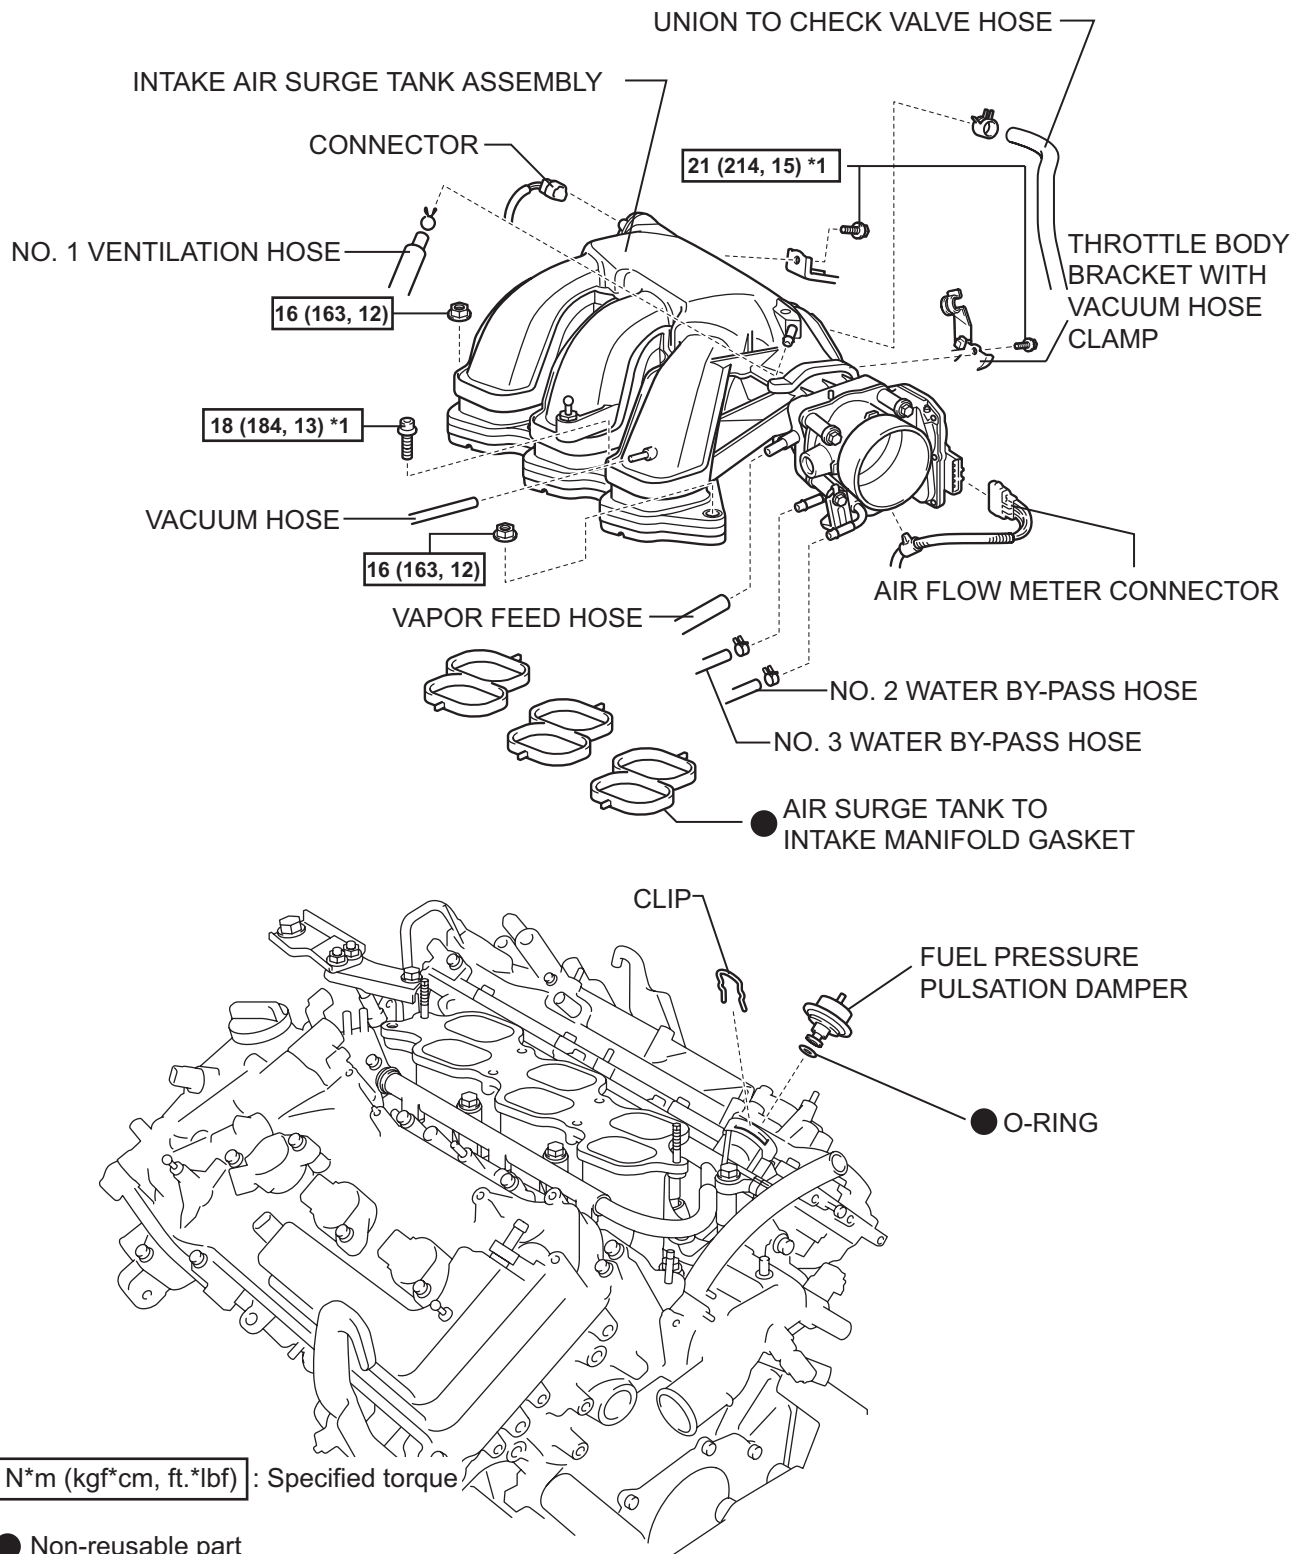

*1: Do not allow oil to contact these bolts

REMOVAL

1. **DISCHARGE FUEL SYSTEM PRESSURE** (See page [FU-13](#))
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
3. **REMOVE ENGINE ASSEMBLY**
(a) Remove the engine (see page [EM-21](#)).
4. **REMOVE INTAKE AIR SURGE TANK ASSEMBLY**
(See page [EM-27](#))
5. **REMOVE FUEL PRESSURE PULSATION DAMPER**
(a) Remove the clip.
(b) Pull out the fuel pressure pulsation damper from the fuel delivery pipe.

