


# FUEL PUMP RESISTOR

## COMPONENTS

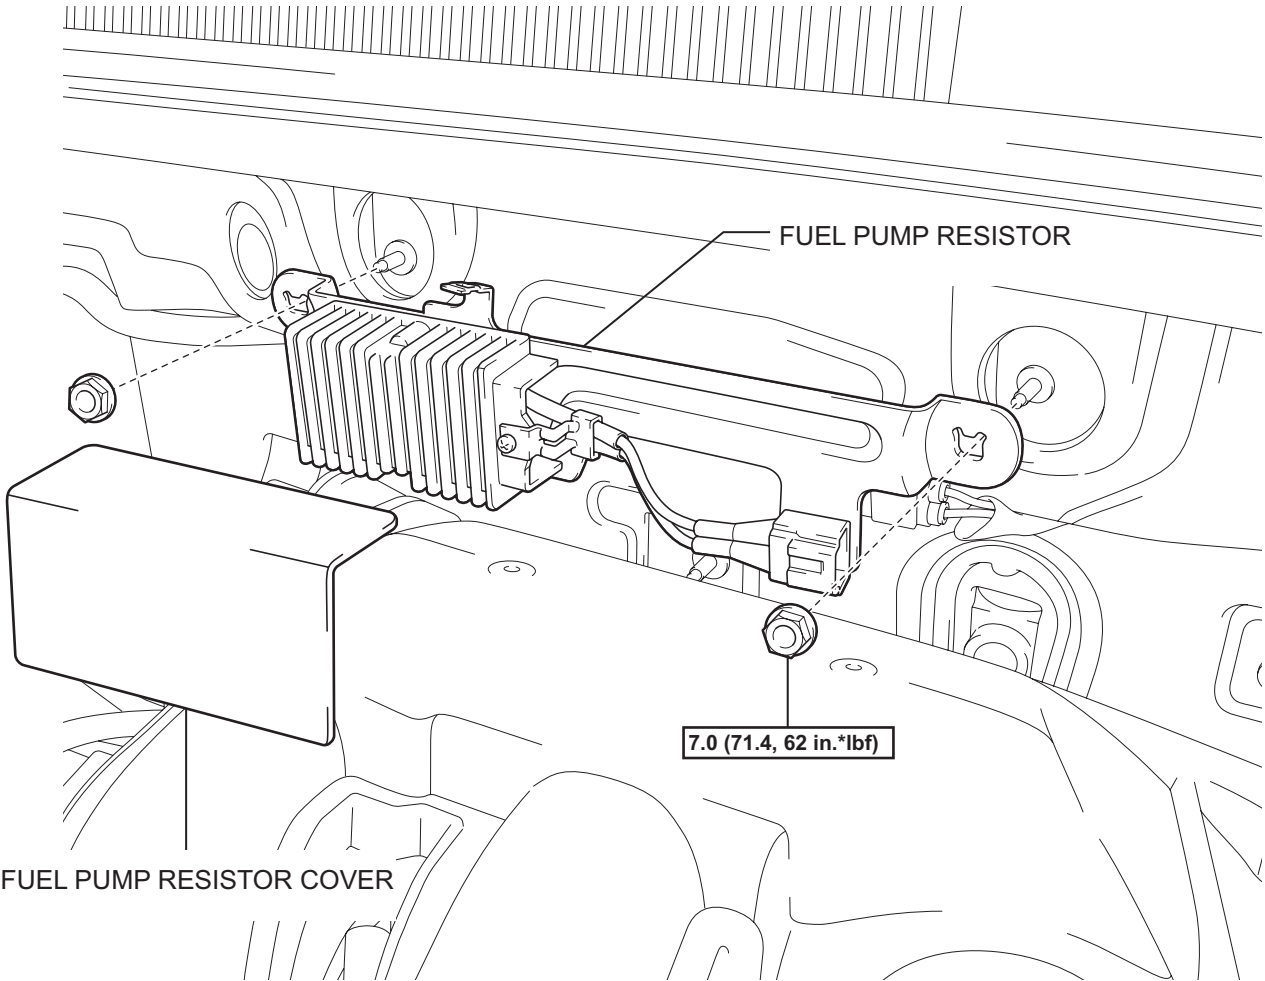

N\*m (kgf\*cm, ft.\*lbf) : Specified torque

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.



2. **REMOVE FUEL PUMP RESISTOR COVER**

(a) Remove the cover from the resistor.

3. **REMOVE FUEL PUMP RESISTOR**

(a) Disconnect the connector.

(b) Remove the 2 bolts and resistor.

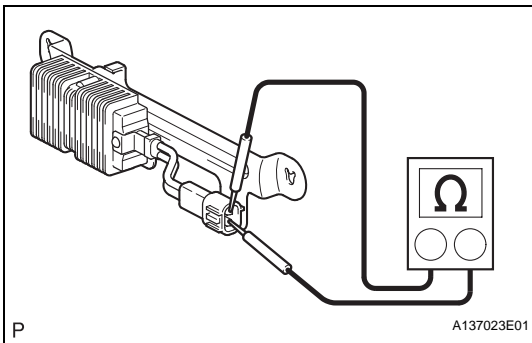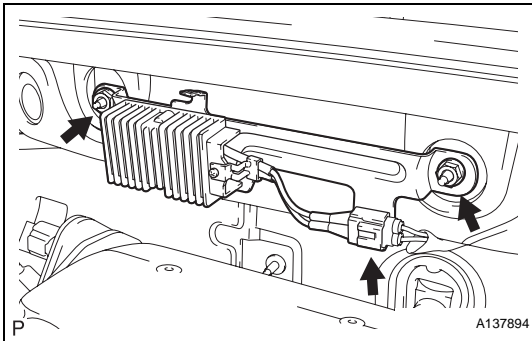

## INSPECTION


1. **INSPECT FUEL PUMP RESISTOR**

(a) Inspect the fuel pump resistor resistance.

(1) Measure the resistance between the terminals.

**Standard resistance:**

**0.53 to 0.57  $\Omega$  at 20°C (68°F)**

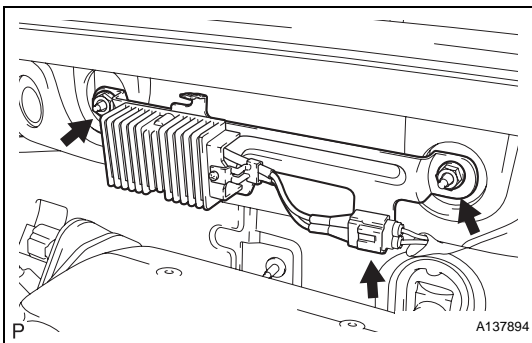

## INSTALLATION

1. **INSTALL FUEL PUMP RESISTOR**

(a) Install the resistor with the 2 bolts.

**Torque: 7.0 N\*m (71.4 kgf\*cm, 62 in.\*lbf)**

(b) Connect the connector.

2. **INSTALL FUEL PUMP RESISTOR COVER**

(a) Install the cover to the resistor.

3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**