


IGNITION COIL COMPONENTS


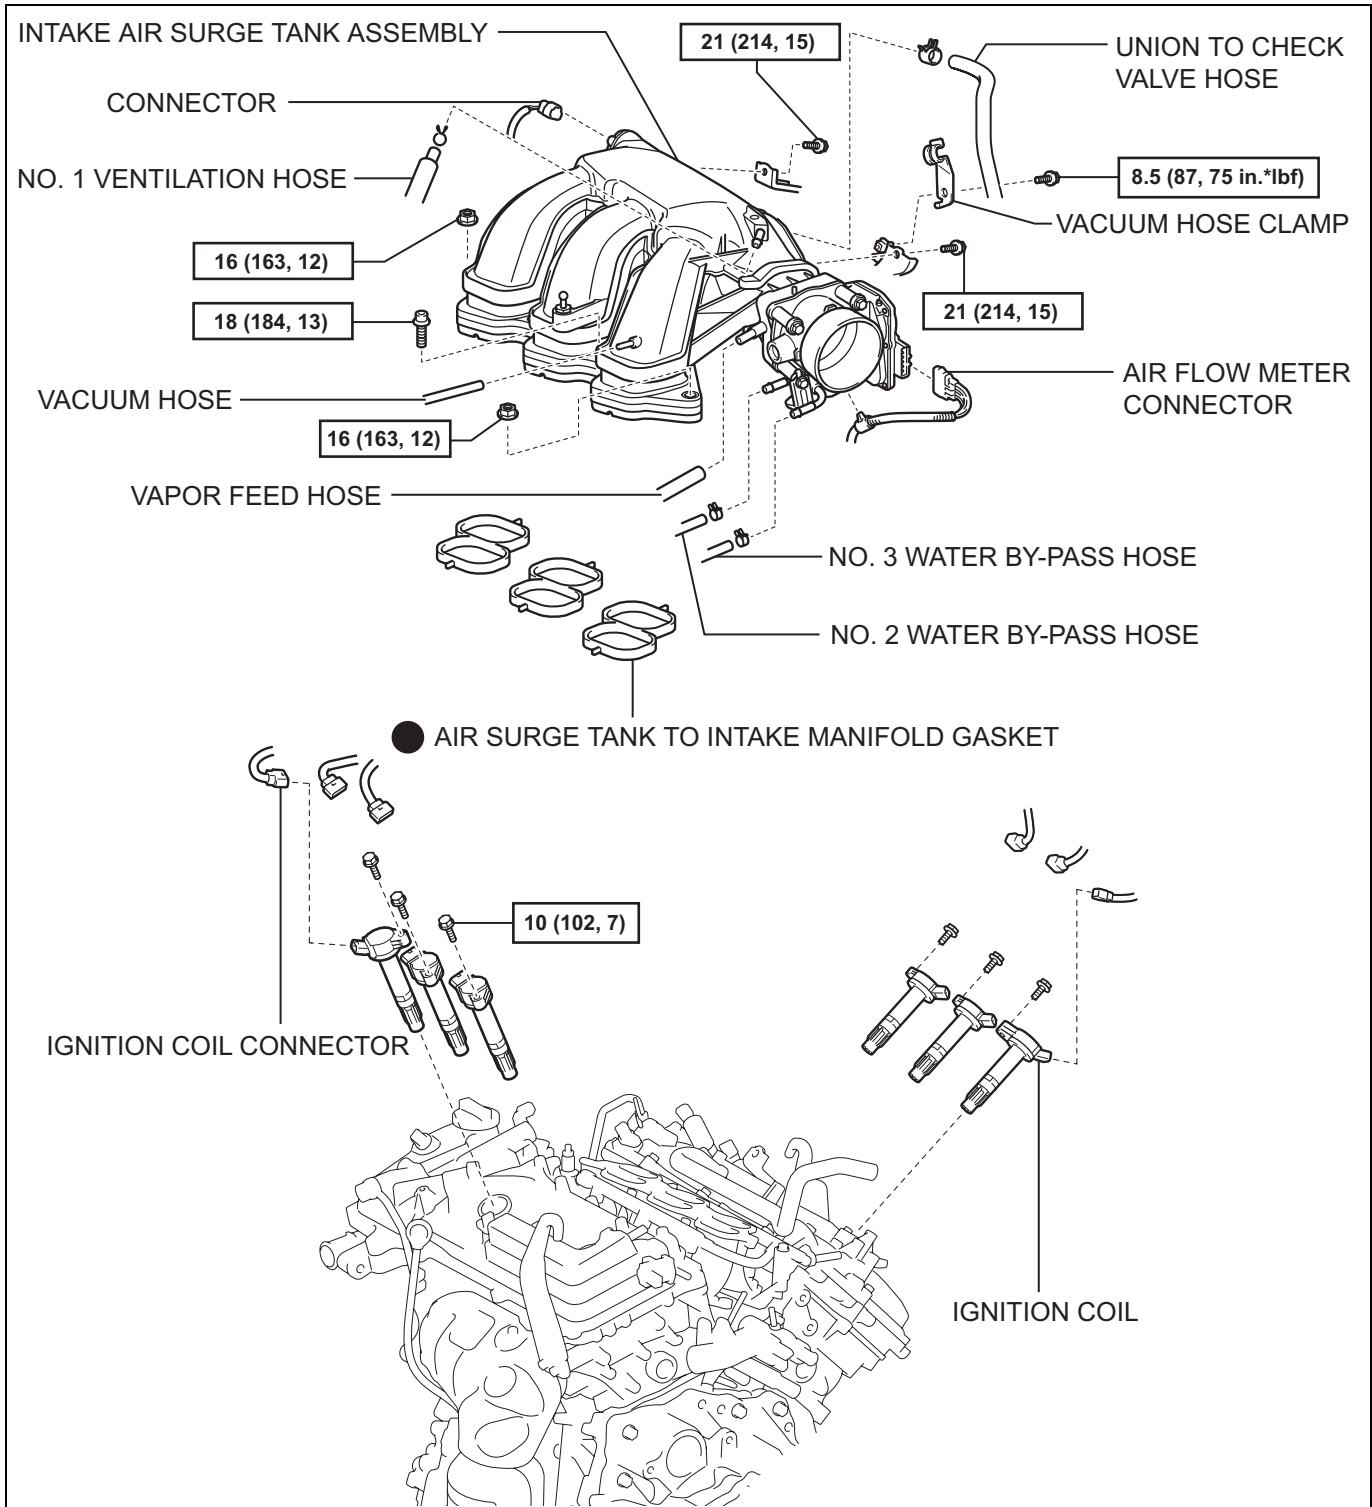


$N \cdot m$ (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

REMOVAL

1. **REMOVE ENGINE ASSEMBLY**
 - (a) Remove the engine (see page [EM-21](#)).
2. **REMOVE INTAKE AIR SURGE TANK ASSEMBLY**
(See page [EM-27](#))
3. **REMOVE IGNITION COIL**
 - (a) Disconnect the 6 ignition coil connectors.
 - (b) Remove the 6 bolts and 6 ignition coils.

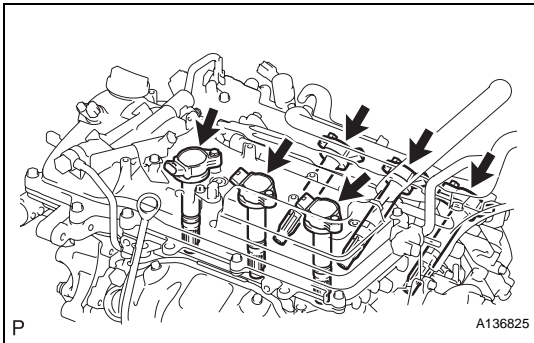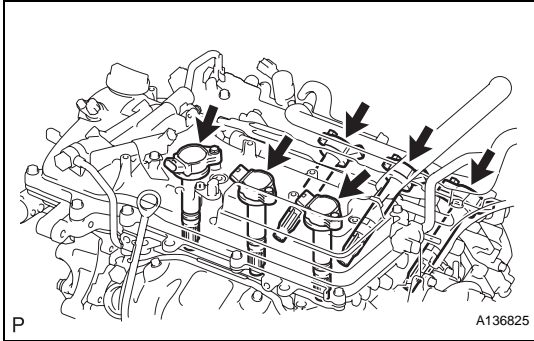

INSTALLATION

1. **INSTALL IGNITION COIL**
 - (a) Install the 6 ignition coils with the 6 bolts.
Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)
 - (b) Connect the 6 ignition coil connectors.
2. **INSTALL INTAKE AIR SURGE TANK ASSEMBLY** (See page [EM-34](#))
3. **INSTALL ENGINE ASSEMBLY**
 - (a) Install the engine (see page [EM-31](#)).