


# AIR CONDITIONING CONTROL ASSEMBLY (for Automatic Air Conditioning System)

## COMPONENTS

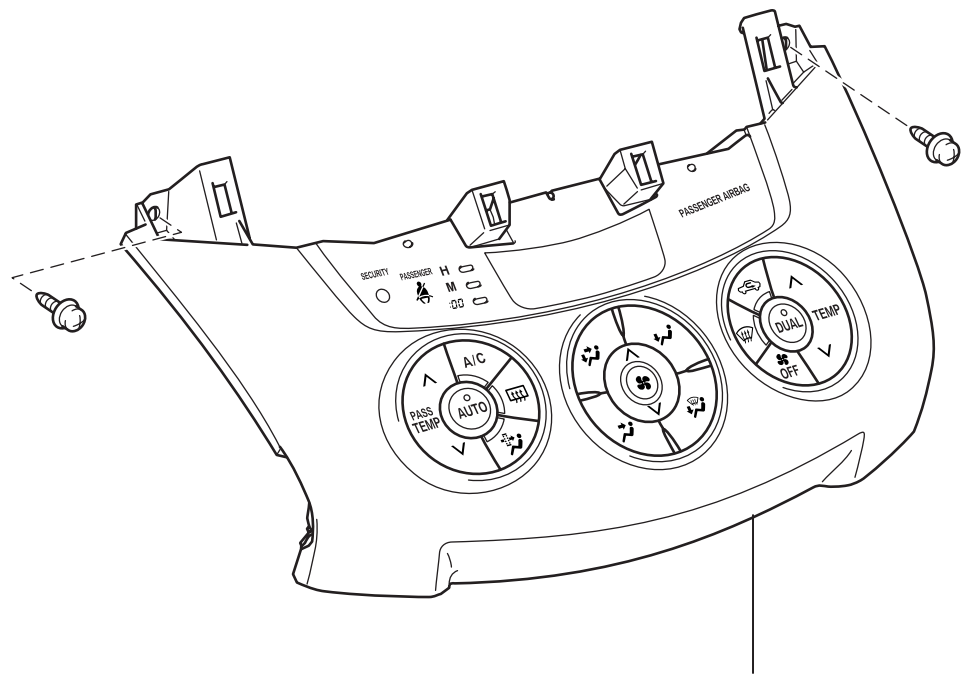

AIR CONDITIONING CONTROL ASSEMBLY



AC

H

E118689E01

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**  
**NOTICE:**  
 Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. **REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER** (See page [IP-5](#))
3. **REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER** (See page [IP-5](#))
4. **REMOVE RADIO RECEIVER** (See page [IP-5](#))
5. **REMOVE AIR CONDITIONING CONTROL ASSEMBLY**
  - (a) Remove the 2 screws.
  - (b) Using a screwdriver, detach the 3 clips.  
**HINT:**  
 Tape the screwdriver tip before use.
  - (c) Connect the connectors and remove the air conditioning control.

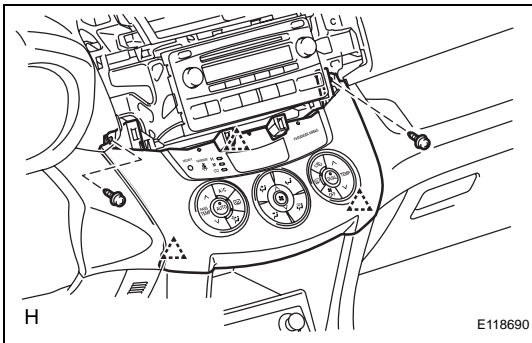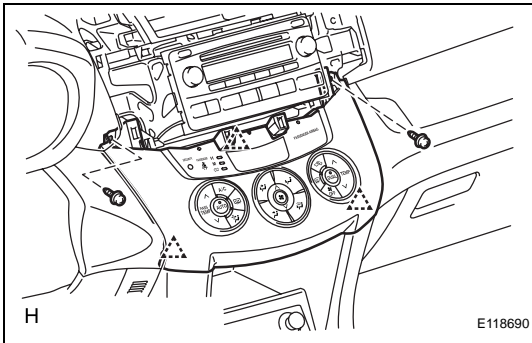

## INSTALLATION

1. **INSTALL AIR CONDITIONING CONTROL ASSEMBLY**
  - (a) Connect the connectors.
  - (b) Attach the 3 clips to install the air conditioning control.
  - (c) Install the 2 screws.
2. **INSTALL RADIO RECEIVER** (See page [IP-10](#))
3. **INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER** (See page [IP-10](#))
4. **INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER** (See page [IP-10](#))
5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
6. **CHECK SRS WARNING LIGHT**
  - (a) Check the SRS warning light (see page [RS-37](#)).