
AC-11

SYSTEM DIAGRAM

)

(2006/01-

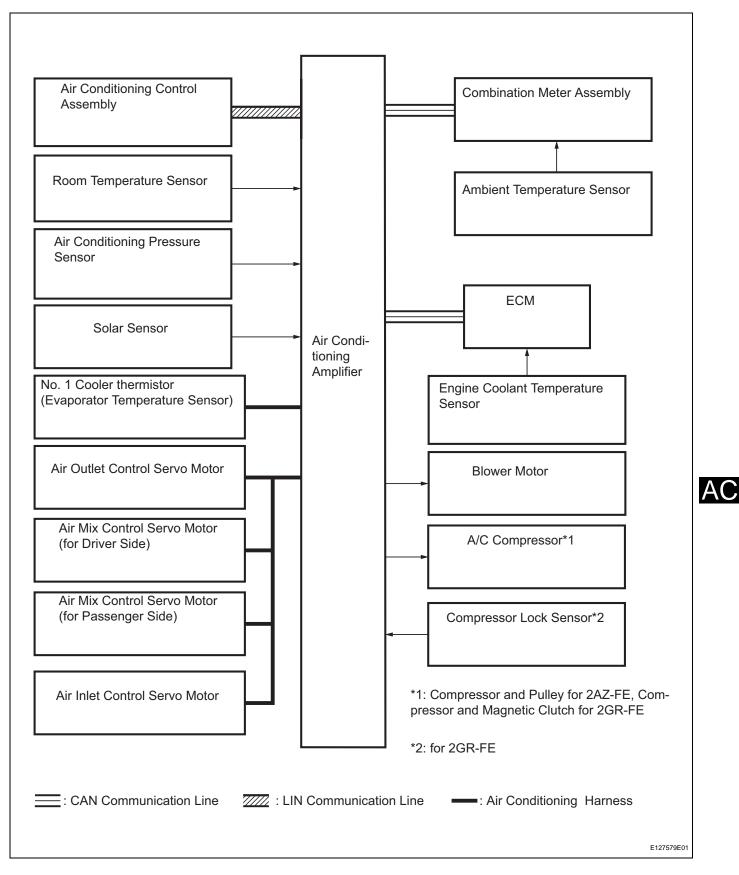

AC-12

Communication table Sender **Communication Line** Receiver Signal A/C compressor control signal Idle up request signal External variable control solenoid Air conditioning amplifier ECM CAN current signal Cooling fan motor driving request signal Ambient temperature signal Front panel indication signal AUTO indication signal A/C indication signal MODE indication signal **REC** indication signal LIN Air conditioning amplifier Air conditioning control assembly FRS indication signal **RDEF** indication signal Blower level indication signal Set temperature indication signal Vehicle speed signal Combination meter assembly Air conditioning amplifier CAN Ambient temperature signal Engine revolution speed signal Engine coolant temperature signal ECM Air conditioning amplifier CAN A/C control cut signal Variable control prohibition signal AUTO switch signal OFF switch signal A/C switch signal DEF switch signal MODE switch signal Air conditioning control assembly Air conditioning amplifier LIN RDEF switch signal Blower switch signal (FAN+, FAN-Set temperature switch signal (UP, DOWN)