


AIR OUTLET CONTROL SERVO MOTOR (for Automatic Air Conditioning System)

COMPONENTS

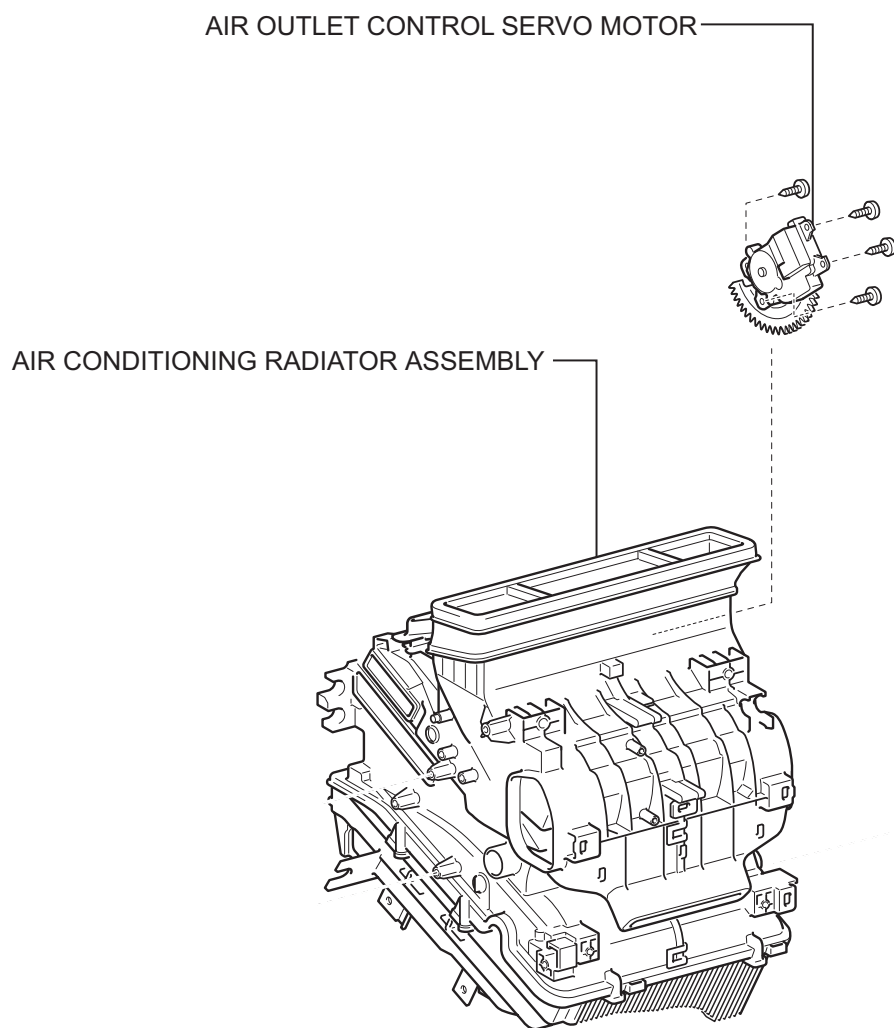

AC

REMOVAL

1. REMOVE AIR CONDITIONING UNIT



- (a) Remove the air conditioning radiator (see page AC-185).

2. REMOVE AIR OUTLET CONTROL SERVO MOTOR (See page AC-191)

INSPECTION

1. INSPECT AIR OUTLET CONTROL SERVO MOTOR

- (a) Inspect the servo motor operation.

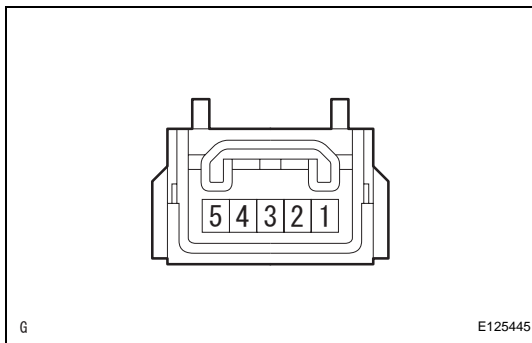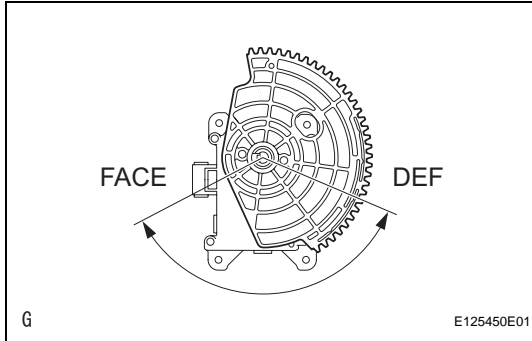

- (1) Connect the positive (+) lead from the battery to terminal 4 and negative (-) lead to terminal 5, and then check that the lever turns to the "FACE" position smoothly.
- (2) Connect the positive (+) lead from the battery to terminal 5 and negative (-) lead to terminal 4, and then check that the lever turns to the "DEF" position smoothly.

If the operation is not as specified, replace the air outlet control servo motor.