

INSTALLATION

- 1. INSTALL AMBIENT TEMPERATURE SENSOR**
 - (a) Connect the connector, and then push in the sensor.
- 2. INSTALL FRONT BUMPER COVER**
 - (a) Install the front bumper cover (see page [ET-10](#)).
- 3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
- 4. CHECK SRS WARNING LIGHT**
 - (a) Check SRS warning light (see page [RS-37](#)).